



# Communication Server 1000M and Meridian 1

## **CS 1000M MG CP PII FNF to CS 1000M MG CP PIV FNF Upgrade**

Avaya Communication Server 1000  
Release 7.6

Document Status: **Standard**

Document Version: **06.02**

Document Number: **NN43021-474**

Date: **December 2013**



## Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

## Documentation disclaimer

"Documentation" means information published by Avaya in varying mediums which may include product information, operating instructions and performance specifications that Avaya generally makes available to users of its products. Documentation does not include marketing materials. Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of documentation unless such modifications, additions, or deletions were performed by Avaya. End User agrees to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims,

lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

## Link disclaimer

Avaya is not responsible for the contents or reliability of any linked websites referenced within this site or documentation provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

## Warranty

Avaya provides a limited warranty on its hardware and Software ("Product(s)"). Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this Product while under warranty is available to Avaya customers and other parties through the Avaya Support website:

<http://support.avaya.com>

Please note that if you acquired the Product(s) from an authorized Avaya reseller outside of the United States and Canada, the warranty is provided to you by said Avaya reseller and not by Avaya. "Software" means computer programs in object code, provided by Avaya or an Avaya Channel Partner, whether as stand-alone products or pre-installed on hardware products, and any upgrades, updates, bug fixes, or modified versions thereto.

## Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, [HTTP://SUPPORT.AVAYA.COM/LICENSEINFO](http://support.avaya.com/licenseinfo) ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC., ANY AVAYA AFFILIATE, OR AN AUTHORIZED AVAYA RESELLER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AUTHORIZED AVAYA RESELLER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING, AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA AUTHORIZED RESELLER; AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE ("AVAYA").

## Heritage Nortel Software

"Heritage Nortel Software" means the software that was acquired by Avaya as part of its purchase of the Nortel Enterprise Solutions Business in December 2009. The Heritage Nortel Software currently available for license from Avaya is the software contained within the list of Heritage Nortel Products located at <http://support.avaya.com/licenseinfo> under the link "Heritage Nortel Products". For Heritage Nortel Software, Avaya grants Customer a license to use Heritage Nortel Software provided hereunder solely to the extent of the authorized activation or authorized usage level, solely for the purpose specified in the Documentation, and solely as embedded in, for execution on, or (in the event the applicable Documentation permits installation on non-Avaya equipment) for communication with Avaya equipment. Charges for Heritage Nortel Software may be based on extent of activation or use authorized as specified in an order or invoice.

## Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, or hardware provided by Avaya. All content on this site, the documentation and the Product provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software unless expressly authorized by Avaya. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

## Third-party components

"Third Party Components" mean certain software programs or portions thereof included in the Software that may contain software (including open source software) distributed under third party agreements ("Third Party Components"), which contain terms regarding the rights to use

---

---

certain portions of the Software ("Third Party Terms"). Information regarding distributed Linux OS source code (for those Products that have distributed Linux OS source code) and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply is available in the Documentation or on Avaya's website at: <http://support.avaya.com/Copyright>. You agree to the Third Party Terms for any such Third Party Components.

#### **Note to Service Provider**

The Product may use Third Party Components that have Third Party Terms that do not allow hosting and may need to be independently licensed for such purpose.

#### **Preventing Toll Fraud**

"Toll Fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of Toll Fraud associated with your system and that, if Toll Fraud occurs, it can result in substantial additional charges for your telecommunications services.

#### **Avaya Toll Fraud intervention**

If you suspect that you are being victimized by Toll Fraud and you need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Support website: <http://support.avaya.com>. Suspected security vulnerabilities with Avaya products should be reported to Avaya by sending mail to: [securityalerts@avaya.com](mailto:securityalerts@avaya.com).

#### **Trademarks**

The trademarks, logos and service marks ("Marks") displayed in this site, the Documentation and Product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the Documentation and Product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party.

Avaya is a registered trademark of Avaya Inc.

All non-Avaya trademarks are the property of their respective owners, and "Linux" is a registered trademark of Linus Torvalds.

#### **Downloading documents**

For the most current versions of documentation, see the Avaya Support website:

<http://support.avaya.com>

#### **Contact Avaya Support**

See the Avaya Support website: <http://support.avaya.com> for product notices and articles, or to report a problem with your Avaya product.

For a list of support telephone numbers and contact addresses, go to the Avaya Support website: <http://support.avaya.com>, scroll to the bottom of the page, and select Contact Avaya Support.

---

---

# Contents

---

<b>New in this release</b> .....	<b>8</b>
Features .....	8
Other .....	8
<b>Customer service</b> .....	<b>12</b>
Navigation .....	12
Getting technical documentation .....	12
Getting product training .....	12
Getting help from a distributor or reseller .....	12
Getting technical support from the Avaya Web site .....	13
<b>System information</b> .....	<b>14</b>
Subject .....	14
Applicable systems .....	15
Intended audience .....	16
Conventions .....	16
Related information .....	17
<b>Preparing and planning for the upgrade</b> .....	<b>20</b>
Contents .....	20
Introduction .....	21
Planning .....	22
Avaya Communication Server 1000 task flow .....	23
Upgrade Checklists .....	25

Preparing .....	25
Identifying the proper procedure . . . . .	25
Connect a terminal . . . . .	26
Printing site data .....	26
Performing a template audit . . . . .	29
Backing up the database (data dump) .....	30
Making the RMD bootable .....	31
Transferring the database from floppy disk to CF (customer database media converter tool) . . . . .	35
Identifying two unique IP addresses .....	41
<b>Performing the upgrade .....</b>	<b>42</b>
Contents . . . . .	42
Introduction .....	42
Reviewing upgrade requirements .....	43
Upgrading Core 1 .....	51
Upgrading Core 0 .....	79
Making the system redundant .....	101
Completing the CP PIV upgrade . . . . .	105
<b>Installing a Signaling Server .....</b>	<b>116</b>
Contents . . . . .	116
Introduction .....	116
Signaling Server task flow . . . . .	117
Readiness checklist .....	119
Server card hardware installation .....	121
Connections . . . . .	136
Upgrading and reconfiguring the software .....	144
<b>Appendix A: Upgrade checklists .....</b>	<b>158</b>
Contents . . . . .	158
Introduction .....	158

Site details ..... 159

Upgrade details ..... 159

Preupgrade checklists ..... 160

Preconversion steps ..... 163

Postconversion checks ..... 165

Quick reference ..... 165

**Index ..... 170**



## New in this release

---

This chapter contains information about Avaya Communication Server 1000 Release 7.6 new features.

### Features

There are no updates to the feature descriptions in this document.

### Other

See the following sections for information about changes that are not feature-related:

### Revision history

#### December 2013

Standard 06.02. This document is up-issued to include browser support changes.

#### March 2013

Standard 06.01. This document is up-issued to support Avaya Communication Server 1000 Release 7.6.

#### March 2012

Standard 05.03. This document is up-issued to include updates to the Installing a Signaling Server chapter.

#### September 2011

Standard 05.02. This document is up-issued to remove legacy feature and hardware content that is no longer applicable to or supported by Communication Server 1000 systems.



**November 2010**

Standard 05.01. This document is published to support Avaya Communication Server 1000 Release 7.5.

**June 2010**

Standard 04.02. This document is upissued to update the Avaya CS 1000M task flow graphic and to include CP PM version 2 content.

**June 2010**

Standard 04.01. This document is upissued to support Avaya Communication Server 1000 Release 7.0.

**June 2009**

Standard 03.03. This document is upissued to update the CP PM BIOS upgrade procedure.

**May 2009**

Standard 03.02. This document is upissued to include task flow graphics for Communication Server 1000 Release 6.0.

**May 2009**

Standard 03.01. This document is issued to support Communication Server 1000 Release 6.0.

**November 2007**

Standard 02.01. This document is issued to support Communication Server 1000 Release 5.5.

**July 2007**

Standard 01.02. This document is upissued with corrections for invoking the install menu during CP PIV and CP P4 upgrades.

**May 2007**

Standard 01.01. This document is upissued for Communication Server 1000 Release 5.0. This document contains information previously contained in the following legacy document, now retired: *Communication Server 1000M and Meridian 1 Large System Upgrades* (553-3021-258).

**May 2006**

Standard 5.00. This document is upissued with corrections for installing clock controllers and keycode upgrade procedure for CP PIV.

**January 2006**

Standard 4.00. This document is upissued with corrections for various upgrade procedures.

**August 2005**

Standard 3.00. This document is upissued to support CP PIV and Communication Server 1000 Release 4.5.

**September 2004**

Standard 2.00. This document is upissued for Communication Server 1000 Release 4.0.

**October 2003**

Standard 1.00. This is a new document for Succession 3.0. It was created to support a restructuring of the Documentation Library. This document contains information previously contained in the following legacy document, now retired: *Upgraded Systems Installation: Upgrade to Options 51C, 61C, 81C* (553-3001-258).



## Customer service

---

Visit the Avaya Web site to access the complete range of services and support that Avaya provides. Go to [www.avaya.com](http://www.avaya.com) or go to one of the pages listed in the following sections.

### Navigation

- “Getting technical documentation” on [page 12](#)
- “Getting product training” on [page 12](#)
- “Getting help from a distributor or reseller” on [page 12](#)
- “Getting technical support from the Avaya Web site” on [page 13](#)

### Getting technical documentation

To download and print selected technical publications and release notes directly from the Internet, go to [www.avaya.com/support](http://www.avaya.com/support).

### Getting product training

Ongoing product training is available. For more information or to register, you can access the Web site at [www.avaya.com/support](http://www.avaya.com/support). From this Web site, you can locate the Training contacts link on the left-hand navigation pane.

### Getting help from a distributor or reseller

If you purchased a service contract for your Avaya product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance.

## Getting technical support from the Avaya Web site

The easiest and most effective way to get technical support for Avaya products is from the Avaya Technical Support Web site at [www.avaya.com/support](http://www.avaya.com/support).

---

## System information

---

This document is a global document. Contact your system supplier or your Avaya representative to verify that the hardware and software described is supported in your area.

### Subject

Use this document to perform upgrades on Avaya Meridian 1 Large Systems. This document also contains information about database transfers, Call Processor card upgrades, and network group upgrades.

This document also contains information about converting Release 3.0 or later software to Avaya Communication Server 1000 (Avaya CS 1000) Release 7.6 on Meridian 1 Options 51C, 61C, 81, 81C, Communication Server 1000M SG and Avaya CS 1000M MG systems. For software conversion procedures prior to Release 3.0, see the *Software conversion procedures* (553-2001-320) document for software Release 24.



#### **IMPORTANT!**

Database conversion for Meridian 1 Options 21E, 51, 61, 71, STE, NT, and XT must be completed by Avaya's Software Conversion Lab. Consult the current Avaya price book for cost and contact information.

#### **Note on legacy products and releases**

This document contains information about systems, components, and features that are compatible with Communication Server 1000 software. For more

information about legacy products and releases, click the **Documentation** link under **Support** on the Avaya home page:

[www.avaya.com](http://www.avaya.com)

## Applicable systems

This document applies to the following systems:

- Communication Server 1000M Single Group (CS 1000M SG)
- Communication Server 1000M Multi Group (CS 1000M MG)
- Meridian 1 Option 61C
- Meridian 1 Option 81C

*Note:* When upgrading software, memory upgrades may be required on the Signaling Server, the Call Server, or both.

### System migration

When particular Meridian 1 systems are upgraded to run CS 1000 Release 7.5 software and configured to include a Signaling Server, they become CS 1000M systems. Table 1 lists each Meridian 1 system that supports an upgrade path to a CS 1000M system.

**Table 1**  
**Meridian 1 systems to Avaya CS 1000M systems**

This Meridian 1 system...	Maps to this CS 1000M system
Meridian 1 Option 61C	CS 1000M Single Group
Meridian 1 Option 81C	CS 1000M Multi Group

## Signaling Server configuration

Meridian 1 Large Systems can be configured to run one or more Signaling Servers. The following Signaling Servers are supported in a Large System configuration for CS 1000 Release 7.5:

- Common Processor Pentium Mobile (CP PM) Signaling Server

- Common Processor Dual Core (CP DC)
- Commercial off-the-Shelf (COTS) Signaling Server

For more information, see “Installing a Signaling Server” on [page 116](#).

## Upgrade paths

This document contains information about the following Large System upgrades:

- CS 1000M MG
- upgrades to FNF
- software upgrades
- network additions

The upgrades documented in this document are structured as source platform to target platform upgrades.

## Intended audience

This document is intended for individuals responsible for upgrading Large Systems.

This document is intended for individuals responsible for software conversion and memory upgrades.

## Conventions

### Terminology

The following systems are referred to generically as “Large System”:

- Communication Server 1000M Single Group (CS 1000M SG)
- Communication Server 1000M Multi Group (CS 1000M MG)
- Meridian 1 Option 61C
- Meridian 1 Option 81C



The Common Processor Pentium Mobile (CP PM), Common Processor Dual Core (CP DC), and Commercial off-the-Shelf (COTS) platforms are referred to as server.

## Related information



### CAUTION — Data Loss

Only personnel who are familiar with the system and with conversion procedures should perform the conversion.

Read the applicable procedures carefully before beginning any the conversion.

**Note:** Converting software on single CPU systems disrupts call processing and allows service only to those telephones connected to Power Failure Transfer Units (PFTU).



### CAUTION WITH ESDS DEVICES

To avoid damaging equipment from electrostatic discharge, wear a properly connected antistatic wrist strap when working on system equipment.

Perform pre-conversion and post-conversion procedures for every system conversion.

Throughout this document the term *media* refers to tape, disk, CD-ROM or Compact Flash (CF), whichever applies to the system.

The term **source** refers to the hardware and software that is currently running. The term **target** refers to the new hardware and software to which the system is converting.

**CAUTION — Data Loss**

Read “General software conversion information” in *Avaya CS 1000M and Meridian 1 Large System Upgrades Overview* (NN43021-458) before performing any operations.

It contains information vital to the conversion process.

## Documents

The following documents are referenced in this document:

- *Avaya Product Compatibility* (NN43001-256)
- *Avaya Converging the Data Network with VoIP* (NN43001-260)
- *Avaya Circuit Card Reference* (NN43001-311)
- *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315)
- *Avaya P Peer Networking Installation and Commissioning* (NN43001-313)
- *Avaya Features and Services* (NN43001-106)
- *Avaya Software Input/Output: Administration* (NN43001-611)
- *Avaya Element Manager System Reference - Administration* (NN43001-632)
- *Avaya Signaling Server IP Line Applications Fundamentals* (NN3001-125)
- *Avaya ISDN Basic Rate Interface: Features* (NN43001-580)
- *Avaya Software Input/Output: Maintenance* (NN43001-711)
- *Avaya Communication Server 1000M and Meridian 1 Large System Planning and Engineering* (NN43021-220)

- *Avaya Communication Server 1000M and Meridian 1 Large System Installation and Commissioning* (NN43021-310)
- *Avaya Communication Server 1000M and Meridian 1 Large System Maintenance* (NN43021-700)
- *Avaya Communication Server 1000M and Meridian 1 Large System Upgrade NTPs* (NN43021-458 to NN43021-474)

## Online

To access Avaya documentation online, click the **Documentation** link under **Support** on the Avaya home page:

[www.avaya.com](http://www.avaya.com)

---

# Preparing and planning for the upgrade

---


## Contents

This chapter contains the following topics:

Introduction . . . . .	21
Planning . . . . .	22
Avaya Communication Server 1000 task flow . . . . .	23
Upgrade Checklists . . . . .	25
Preparing . . . . .	25
Identifying the proper procedure . . . . .	25
Connect a terminal . . . . .	26
Printing site data . . . . .	26
Performing a template audit . . . . .	29
Backing up the database (data dump) . . . . .	30
Making the RMD bootable . . . . .	31
Transferring the database from floppy disk to CF (customer database media converter tool) . . . . .	34
Identifying two unique IP addresses . . . . .	40

# Introduction

This document implements a “source- to-target” approach to performing an upgrade. It is important to correctly identify the source platform, target platform, and maintenance window required to perform the upgrade.



**IMPORTANT!**

This upgrade requires that the PC you are working from is equipped with a floppy disk drive and CF reader (or, if a CF reader is not available, a PCMCIA CF adaptor).

Each section features check boxes indicating what state the system should be in at that stage of the upgrade. If the system is not in the proper state steps should be taken to correct this.

Each section is written to maintain Dial Tone where possible and limit service interruptions.

Before attempting any software or hardware upgrade field personnel should follow the steps in Table 2:

**Table 2**  
**Prepare for upgrade steps (Part 1 of 2)**

Procedure Step	Page
Planning	22
Upgrade Checklists	25
Preparing	25
Identifying the proper procedure	25
Connect a terminal	26
Printing site data	26
Performing a template audit	29
Backing up the database (data dump)	30

**Table 2**  
**Prepare for upgrade steps (Part 2 of 2)**

Procedure Step	Page
Making the RMD bootable	31
Transferring the database from floppy disk to CF (customer database media converter tool)	34
Identifying two unique IP addresses	40

## Planning

Planning for an upgrade involves the following tasks:

- Read and understand the current release Product Bulletin.
- Review the current release product bulletin related specifically to the software being upgraded.
- Conduct a site inspection to determine proper power and grounding.
- Review the site profile to determine proper foot space if adding new columns or modules.

**Note:** For information about adding new network shelves, see *Avaya Communication Server 1000M and Meridian 1 Large System Installation and Commissioning* (NN43021-310).

- Ensure sufficient power for new columns/modules or applications.
- Identify all applications that are currently installed on the source platform.
- Identify and correct outstanding service problems.
- Verify the site log is updated with current trunking, call routing, application notes, and site contact information.
- Review all product bulletins and Avaya Alerts that impact the site.

- Determine if software can be converted on site or must be sent to Avaya.
- Prepare a contingency plan for backing out of the upgrade.



#### **DANGER OF ELECTRIC SHOCK**

In a DC-powered system, power to the column can remain on during the following procedures. In an AC-powered system, however, power to the entire column *must* be shut down throughout the procedures.


## **Avaya Communication Server 1000 task flow**

This section provides a high-level task flow for the installation or upgrade of an Avaya CS 1000 system. The task flow indicates the recommended sequence of events to follow when configuring a system and provides the document number that contains the detailed procedures required for the task.

For more information refer to the following documents, which are referenced in Figure 1 on [page 24](#):

- *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315)
- *Avaya Communication Server 1000M and Meridian 1 Large System Installation and Commissioning* (NN43021-310)
- *Avaya CS 1000M and Meridian 1 Large System Upgrades Overview* (NN43021-458)

**Figure 1**  
**Communication Server 1000M task flow**

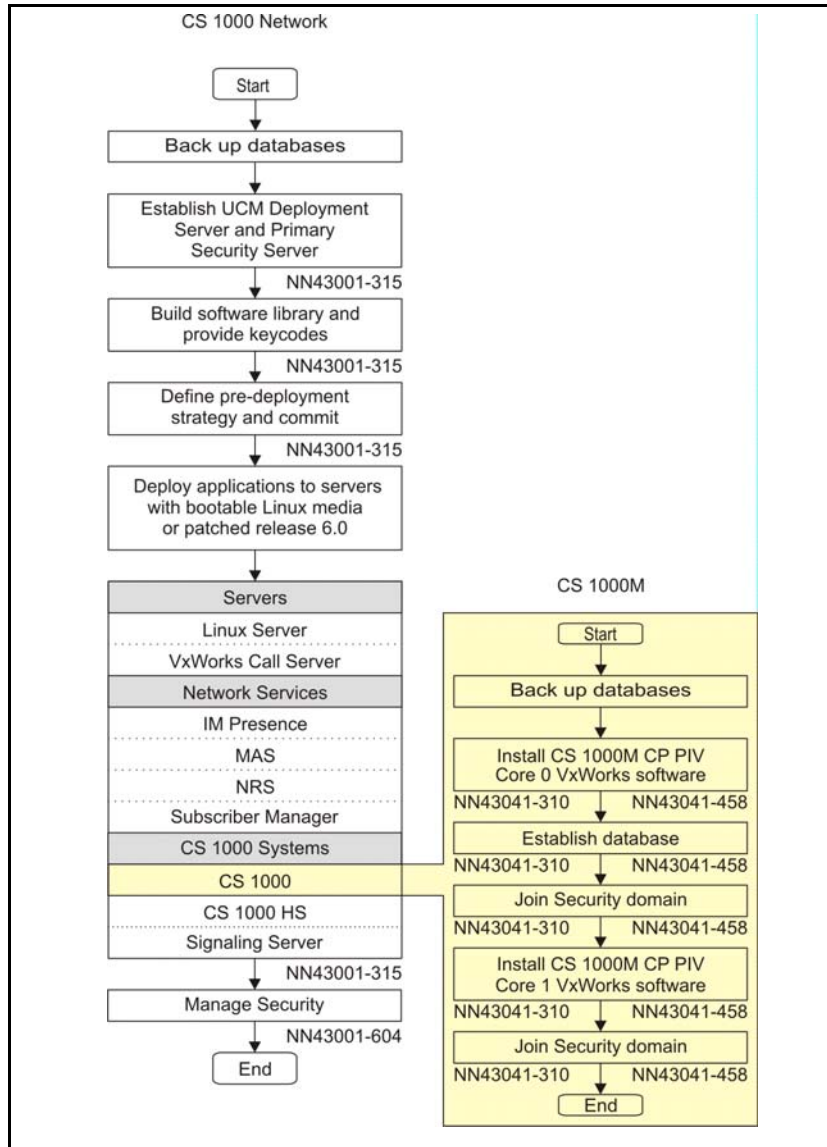



## Upgrade Checklists

Upgrade checklists can be found in “Upgrade checklists” on [page 158](#). Engineers may print this section for reference during the upgrade.

## Preparing

Preparing for an upgrade involves the following tasks:

- Identify and become familiar with all procedures.
- Verify that all installed applications meet the minimum software requirements for the target platform (see *Avaya Communication Server 1000M and Meridian 1 Large System Planning and Engineering* (NN43021-220)).
- Verify proper cable lengths for the target platform.
- Determine and note current patch or Dep lists installed at the source platform.
- Determine required patch or Dep lists at the target platform for system-patchable components.
- Determine required patches or DEP lists for applicable applications.
- Determine and communicate the required maintenance window, contingency plan and the impact to the customer to complete the procedure.
- Perform an inventory on required software and hardware.
- Secure the source software and key code.
- Secure the target software and key code.
- Verify the new key code using the DKA program.
- Print site data.

## Identifying the proper procedure

Each procedure has been written in a “source- to-target” format. Each procedure features warning boxes and check boxes placed at critical points.

Changing the procedure or ignoring the warning boxes could cause longer service interruptions.

## Connect a terminal

### Procedure 1

#### Connecting a terminal

A maintenance terminal is required to access the Core or Core/Net modules during the upgrade procedure.

- 1 Connect a terminal to the J25 port on the I/O panel in the *inactive* Core or Core/Net module.
- 2 The settings for the terminal are:
  - a. 9600 baud
  - b. 8 data
  - c. parity none
  - d. 1 stop bit
  - e. full duplex
  - f. XOFF
- 3 If only one terminal is used for both Core or Core/Net modules, the terminal must be connected from side-to-side to access each module. An "A/B" switch box can also be installed to switch the terminal from side to side.

---

**End of Procedure**

---

## Printing site data

Print site data to preserve a record of the system configuration (see Table 3 on [page 27](#)). Verify that all information is correct. Make corrections as necessary.

**Note:** Items marked with an asterisk (\*) are required. Other items are recommended for a total system status.

**Table 3**  
**Print site data (Part 1 of 3)**

Site data	Print command	
Terminal blocks for all TNs	LD 20	
	REQ	PRT
	TYPE	TNB
	CUST	<cr>
Directory Numbers	LD 20	
	REQ	PRT
	TYPE	DNB
	CUST	<cr>
Attendant Console data block for all customers	LD 20	LD 20
	REQ	PRT
	TYPE	ATT, 2250
	CUST	<cr>
*Customer data block for all customers	LD 21	LD 21
	REQ	PRT
	TYPE	CDB
	CUST	<cr>
Route data block for all customers	LD 21	
	REQ	PRT
	TYPE	RDB
	CUST	Customer number
	ROUT	<cr>
	ACOD	<cr>
*Configuration Record	LD 22	
	REQ	PRT
	TYPE	CFN

**Table 3**  
**Print site data (Part 2 of 3)**

Site data	Print command	
*Software packages	LD 22	
	REQ	PRT
	TYPE	PKG
*Software issue and tape ID	LD 22	
	REQ	ISS
	REQ	TID
* Peripheral software versions	LD 22	
	REQ	PRT
	TYPE	PSWV
ACD data block for all customers	LD 23	
	REQ	PRT
	TYPE	ACD
	CUST	Customer Number
	ACDN	ACD DN (or <CR>)
Superloop card IDs and software version (peripheral controller, superloop network and controller cards)	LD 32	
		IDC loop
Multi-purpose ISDN Signaling Processor (MISP) card	LD 27	
	REQ	PRT
	TYPE	MISP
	LOOP	loop number (0-158)
	APPL	<cr>
	PH	<cr>
DTI/PRI data block for all customers	LD 73	
	REQ	PRT
	TYPE	DDB

**Table 3**  
**Print site data (Part 3 of 3)**

Site data	Print command	
Print the configured host information	LD 117	PRT HOST (provides system IP addresses)
Superloops and XPEs	LD 97	
	REQ	CHG
	TYPE	SUPL
	SUPL	Vxxx
		V stands for a virtual superloop and xxx is the number of the virtual superloop.
		xxx = 0-252 in multiples of four for Avaya CS 1000 Media Gateway 1000E (Avaya MG 1000E)
<b>Note:</b> Items marked with asterisks (*) are required printout for conversion. Other items are recommended for a total system status.		

## Performing a template audit

A template audit (LD 01) reviews the templates in your system. Corrupted and duplicate templates are cleaned up. An example of the information generated during the audit is listed below.

**Note:** The template audit may take an extended period of time on large systems. Run the audit during a low traffic period.



### CAUTION — Service Interruption

#### Loss of Data

Do not abort this overlay until the audit is complete. If the overlay is interrupted, data will be corrupted.

**LD 01**     The audit begins as soon as LD 01 is entered.

TEMPLATE AUDIT

STARTING PBX TEMPLATE SCAN

TEMPLATE 0001 USER COUNT LOW            CHECKSUM OK

TEMPLATE 0002 USER COUNT HIGH          CHECKSUM OK

TEMPLATE 0003 NO USERS FOUND

STARTING SL1 TEMPLATE SCAN

TEMPLATE 0001 USER COUNT OK            CHECKSUM OK

•

•

TEMPLATE 0120 USER COUNT OK            CHECKSUM OK

TEMPLATE AUDIT COMPLETE

## Backing up the database (data dump)

To back up system data, complete the following two procedures.

- 1     Perform a data dump to save all system memory to the hard disk.
- 2     Perform a ABKO (attended backup) to save the database to a spare set of floppy disks.

### **Procedure 2** **Performing a data dump**

- 1     Log into the system.
- 2     Load the Equipment Data Dump Program (LD 43). At the prompt, enter:

**LD 43**            Load program

- 3    When “EDD000” appears on the terminal, enter:

**EDD**                      Begin the data dump



**CAUTION**

**Loss of Data**

If the data dump does not succeed, do not continue. Contact your technical support organization. You must correct a data dump problem before the system can be upgraded.

- 4    The messages “DATADUMP COMPLETE” and “DATABASE BACKUP COMPLETE” will appear once the data dump is complete.

\*\*\*\*                      Exit program

---

**End of Procedure**

---

## Making the RMD bootable



**CAUTION — Data Loss**

The PC utility used in the following procedure (mkbootrmd.exe) does not validate whether the drive letter entered is a valid RMD CF card. You must enter the correct RMD drive letter when prompted or risk formatting the incorrect drive.


**Note:** This utility is supported by all versions of Microsoft Windows.

The installation RMD CF card must come preformatted and bootable from Avaya. Consumer CF cards are not bootable by default and must be made bootable as outlined in Procedure 3 on [page 31](#).

**Procedure 3**  
**Making the RMD bootable**

- 1 After downloading the software image file, unzip it to a directory on your PC.
- 2 Open the utilities folder.
- 3 Double click the mkbootrmd.bat file. Insert a blank 512 MByte CF card (see Figure 2).

**Figure 2**  
**mkbootrmd.bat**

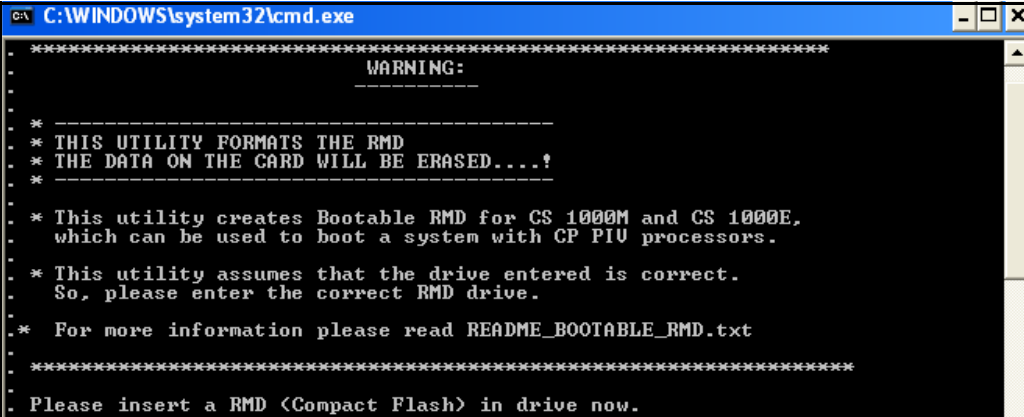


```
C:\WINDOWS\system32\cmd.exe
*****
WARNING:
*****
* -----
* THIS UTILITY FORMATS THE RMD
* THE DATA ON THE CARD WILL BE ERASED....!
* -----
* This utility creates Bootable RMD for CS 1000M and CS 1000E,
  which can be used to boot a system with CP PIV processors.
* This utility assumes that the drive entered is correct.
  So, please enter the correct RMD drive.
* For more information please read README_BOOTABLE_RMD.txt
*****
Please insert a RMD <Compact Flash> in drive now.
```



- 4     Enter the correct drive letter of the RMD (see Figure 3).

Figure 3  
mkbootrmd.bat

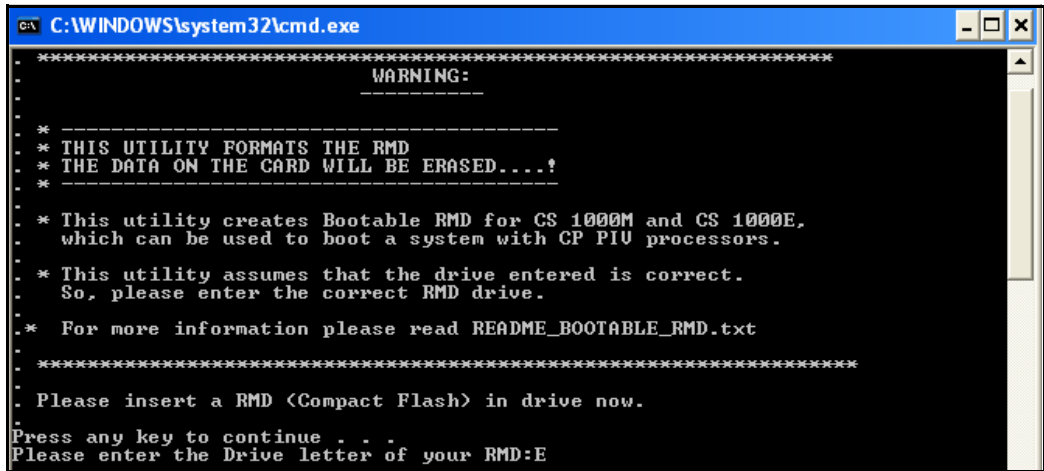

```
C:\WINDOWS\system32\cmd.exe
*****
                        WARNING:
*****
* -----
* THIS UTILITY FORMATS THE RMD
* THE DATA ON THE CARD WILL BE ERASED....!
* -----
* This utility creates Bootable RMD for CS 1000M and CS 1000E,
  which can be used to boot a system with CP PIU processors.
* This utility assumes that the drive entered is correct.
  So, please enter the correct RMD drive.
* For more information please read README_BOOTABLE_RMD.txt
*****
Please insert a RMD (Compact Flash) in drive now.
Press any key to continue . . .
Please enter the Drive letter of your RMD:E
```

- 5 The boot sector files (bootrom.sys and nvram.sys) are successfully copied making the CF card bootable (see Figure 4).

**Figure 4**  
**Boot sector successfully installed**

```
. RMD format Successful ...  
. Installing Boot sector ...  
. Copying files . . .  
. bootrom.sys copied OK.  
. Check whether the following output shows  
. "All the specified file(s) are contiguous"  
.   
.      *** WARNING ***  
. IF THE FILES ARE NOT CONTIGUOUS,  
. PLEASE RECREATE THE RMD  
.      *** ** *  
. Press any key to continue . . .  
. The type of the file system is FAT.  
. Volume CS1000BOOT created 4/12/2006 12:22 PM  
. Volume Serial Number is 389E-1E98  
. Windows is verifying files and folders...  
. File and folder verification is complete.  
. Windows has checked the file system and found no problems.  
  
. 512,180,224 bytes total disk space.  
. 352,256 bytes in 1 files.  
. 511,827,968 bytes available on disk.  
  
. 8,192 bytes in each allocation unit.  
. 62,522 total allocation units on disk.  
. 62,479 allocation units available on disk.  
. All specified files are contiguous.  
. .
```

————— End of Procedure —————

## Transferring the database from floppy disk to CF (customer database media converter tool)



### **IMPORTANT!**

This upgrade requires that the PC you are working from is equipped with a floppy disk drive and CF reader (or, if a CF reader is not available, a PCMCIA CF adaptor).

The floppy disk that contains the backed up customer database needs to be transferred to a CF card. This procedure converts the customer database from a 2 MByte floppy disk to CF card, which is restored during the CS 1000 Release 7.5 software upgrade later in this section. Avaya recommends using the extra CF card included with the Software Install Kit.


### **Procedure 4**

#### **Transferring the customer database from floppy disk to CF**

This procedure requires that the PC you are working from is equipped with a floppy disk drive and CF reader (or, if a CF reader is not available, a PCMCIA CF adaptor).

- 1    Insert the floppy disk containing the backed up customer database from Procedure 2 on [page 30](#).
- 2    Insert a CF card (there is one included in the Software Install Kit) into the CF reader or PCMCIA CF adapter.
- 3    Start the Database Media Converter utility. The first screen (Figure 5 on [page 35](#)) prompts you to select the correct drive letter for the floppy disk drive.

**Figure 5**  
**Select the floppy disk drive**

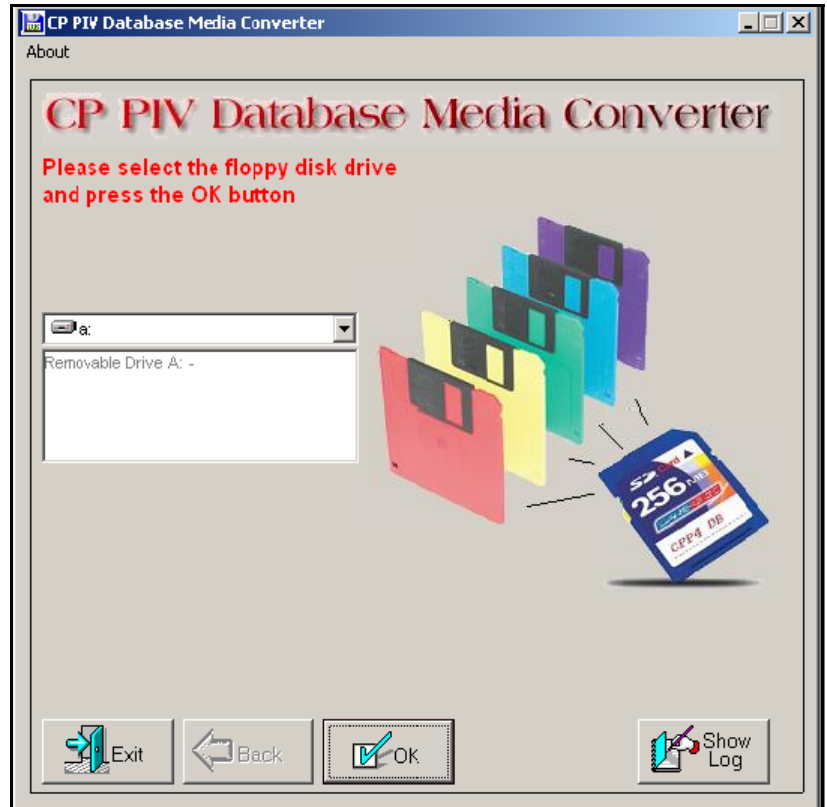

- 4 The utility then prompts you to insert the floppy disk (diskette 1) and click OK (see Figure 6 on [page 36](#)).

**Figure 6**  
**Insert diskette 1**




- 5    After verifying the database on the floppy disk, the utility prompts you to select the CF drive (see Figure 7 on [page 37](#)).

**Figure 7**  
**Select the CF drive**



- 6** At this point, 2 options are available:
- If the CF card already contains a previously backed-up database, a dialog box appears (see Figure 8 on [page 38](#)). Click yes to replace old database.
  - If the CF card is blank, the database is backed up to the CF card.

**Figure 8**  
**Replace database on CF drive**

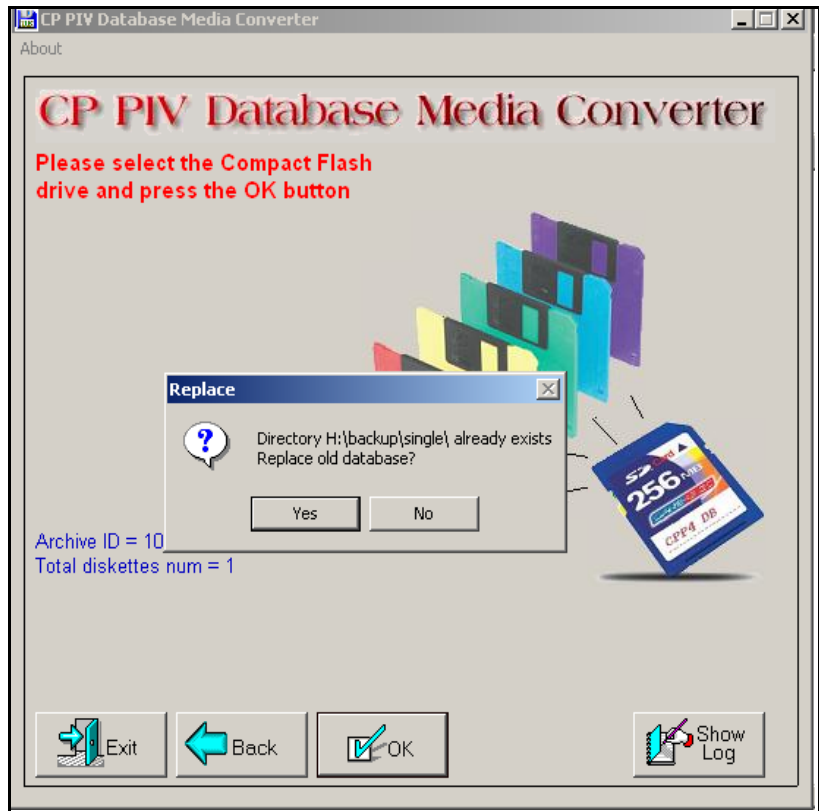

- 7 The utility completes the transfer to CF and prompts you to copy another or EXIT.

**Figure 9**  
**Copy another or exit**



— End of Procedure —



## Identifying two unique IP addresses

Each CP PIV system must be configured with two unique IP addresses for LAN identification and communication. One IP address is defined for the *active* Core. The second IP address is defined for the *inactive* Core. In this configuration, the *active* Core (either Core 0 or Core 1) that handles call processing is always identified by the same IP address.

- Contact your System Administrator to identify two unique IP addresses before the upgrade.

---

# Performing the upgrade

---

## Contents

This chapter contains the following topics:

<a href="#">Introduction . . . . .</a>	<a href="#">42</a>
<a href="#">Reviewing upgrade requirements . . . . .</a>	<a href="#">43</a>
<a href="#">Upgrading Core 1 . . . . .</a>	<a href="#">51</a>
<a href="#">Upgrading Core 0 . . . . .</a>	<a href="#">78</a>
<a href="#">Making the system redundant . . . . .</a>	<a href="#">99</a>
<a href="#">Completing the CP PIV upgrade. . . . .</a>	<a href="#">103</a>

## Introduction

The target upgrade to Avaya Communication Server 1000M MG CP PIV FNF must meet the requirements of Product Bulletins P2002-1658-NA, PAA-2003-0199-NA, and 2000-047 rev1. Highlights include:

- PB requires NTRB53AA Clock Controller
- NT5D12AC, AD, and AG (1.54MB) support
- NT5D97AB, AD (2.0 MByte) support
- Both NTRC46 cables must be the same length

This upgrade takes an Avaya CS 1000M MG CP PII with FNF to a CS 1000M MG CP PIV with FNF.

For information about upgrading and configuring the Signaling Server, see “Installing a Signaling Server” on [page 116](#).

## Reviewing upgrade requirements

### Check software received

The following software packages are required to upgrade a system to CS 1000M MG CP PIV FNF:

- CORENET Core Network Module Package 299
- CPP\_CNI CP Pentium Backplane for Intel Machine Package 368

Compact Flash Software Install Kit contains the following items:

- One CF (512 MByte) card containing:
  - Install Software files
  - CS 1000 Release 7.5 software
  - Dep. Lists (PEPs)
  - Key code File
- One blank CF card for database backup
- An Avaya CS 1000 Release 7.5 Documentation CD



#### IMPORTANT!

Systems and components delivered to customer sites may include preinstalled software. However, the preinstalled software versions are typically older and are included only for manufacturing and order management purposes. **Do not attempt to operate the system with the preinstalled software.** The latest software must be downloaded from the Avaya Software Downloads web site and installed as part of the upgrade process.

## Check equipment received

This section describes the **minimum** equipment required for CP PIV with FNF. Additional equipment can also be installed during the upgrade. Verify that *all* equipment has been received.

Before the upgrade, check that the equipment on the order form is also on the packing slip. Check that all equipment has been received. If any items are missing, contact your supplier for replacements before you begin the upgrade.



### CAUTION

#### Service Interruption

DO NOT proceed with the upgrade if any of the required equipment is missing. All equipment must be received to complete the upgrade.

## Check vintage requirements for existing hardware

Make sure that existing hardware meets the following minimum vintage requirements for CP PIV:

- The NT4N65AC cCNI card must be minimum vintage of AC.
- The NT4N48 System Utility card must be minimum vintage AA.
- The QPC441 3-Port Extender (3PE) cards must be minimum vintage F.
- The NTRB53 Clock Controller cards must be minimum vintage AA.
- The existing QPC471 Clock Controller cards must be minimum vintage H or the QPC775 Clock Controller cards (all countries except USA) must be minimum vintage E.
- NT6D41CA (DC) Power Supply
- NT8D29BA (AC) Power Supply
- The QPC43 Peripheral Signaling cards must be minimum vintage R.

If any of the equipment listed does not meet the requirements, replace the equipment before you begin the upgrade.



### CAUTION

#### Service Interruption

Equipment that does not meet the minimum vintage requirements will cause system malfunctions and loss of call processing.

Table 4 describes the *minimum* equipment required to upgrade a system to CP PIV. Additional equipment for increased Network capacity is ordered separately.

**Table 4**  
**Minimum requirements for Meridian 1 Option 81C CP PIV with FNF systems**

Order number	Description	Quantity per system
NT4N39	CP PIV Call Processor Card (512 MByte memory)	2
N0026096	MMDU replacement faceplate	2

### Check required tools

Table 5 lists the tools required to upgrade an Avaya system. Special tools required in a procedure are listed with that procedure.

**Table 5**  
**List of recommended tools (Part 1 of 2)**

- Digital Multimeter (DMM)
- Pliers, needle-nose
- Pliers, standard
- Screwdriver, 3/16" flat blade
- Screwdriver, #2 Phillips
- Wire cutters


**Table 5**  
**List of recommended tools (Part 2 of 2)**

- |   |
|---|
| <ul style="list-style-type: none"><li>— Electrical insulation tape</li><li>— 5/16" socket wrench</li><li>— Electric drill and drill bits</li><li>— Hammer and sheet metal center punch</li><li>— 1/4" socket wrench</li><li>— 3/8" socket wrench</li><li>— 1/4" nut driver</li><li>— 7/16" socket driver</li><li>— 11/32 Deep Socket</li><li>— Flashlight</li></ul> |
|---|


## Verify CP PIV hardware

Figure 10 on [page 47](#) shows the CP PIV processor card side view. Figure 11 on [page 48](#) shows the CP PIV processor card front view.

Figure 10  
CP PIV call processor card (side)

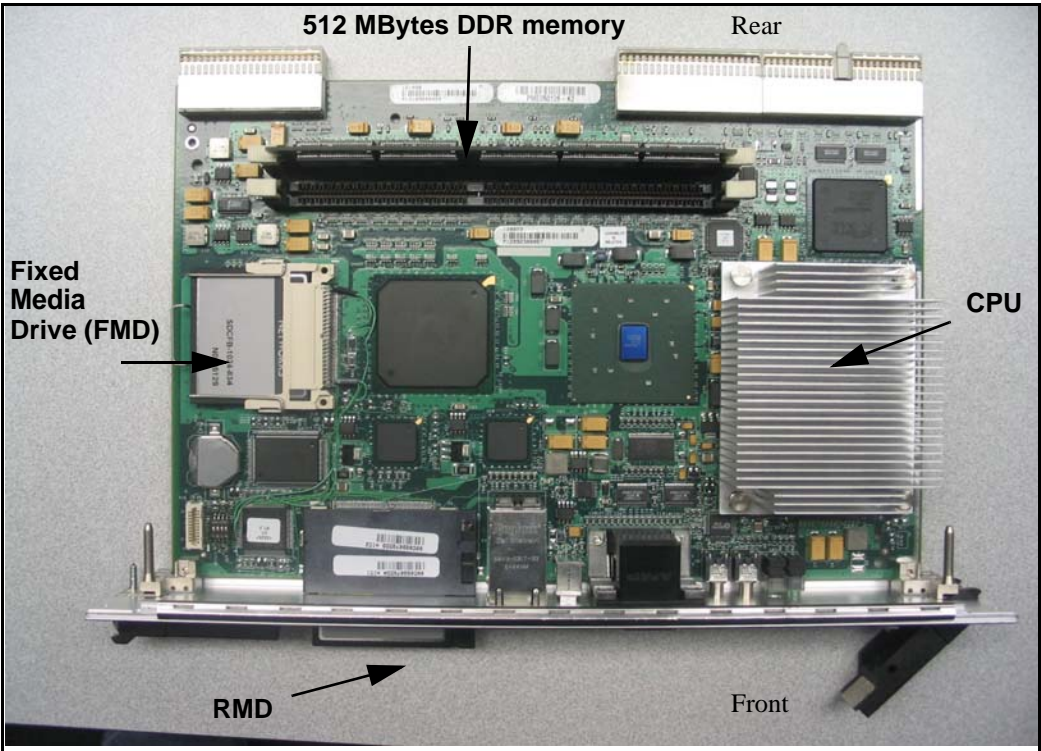


**Figure 11**  
**CP PIV call processor card (front)**

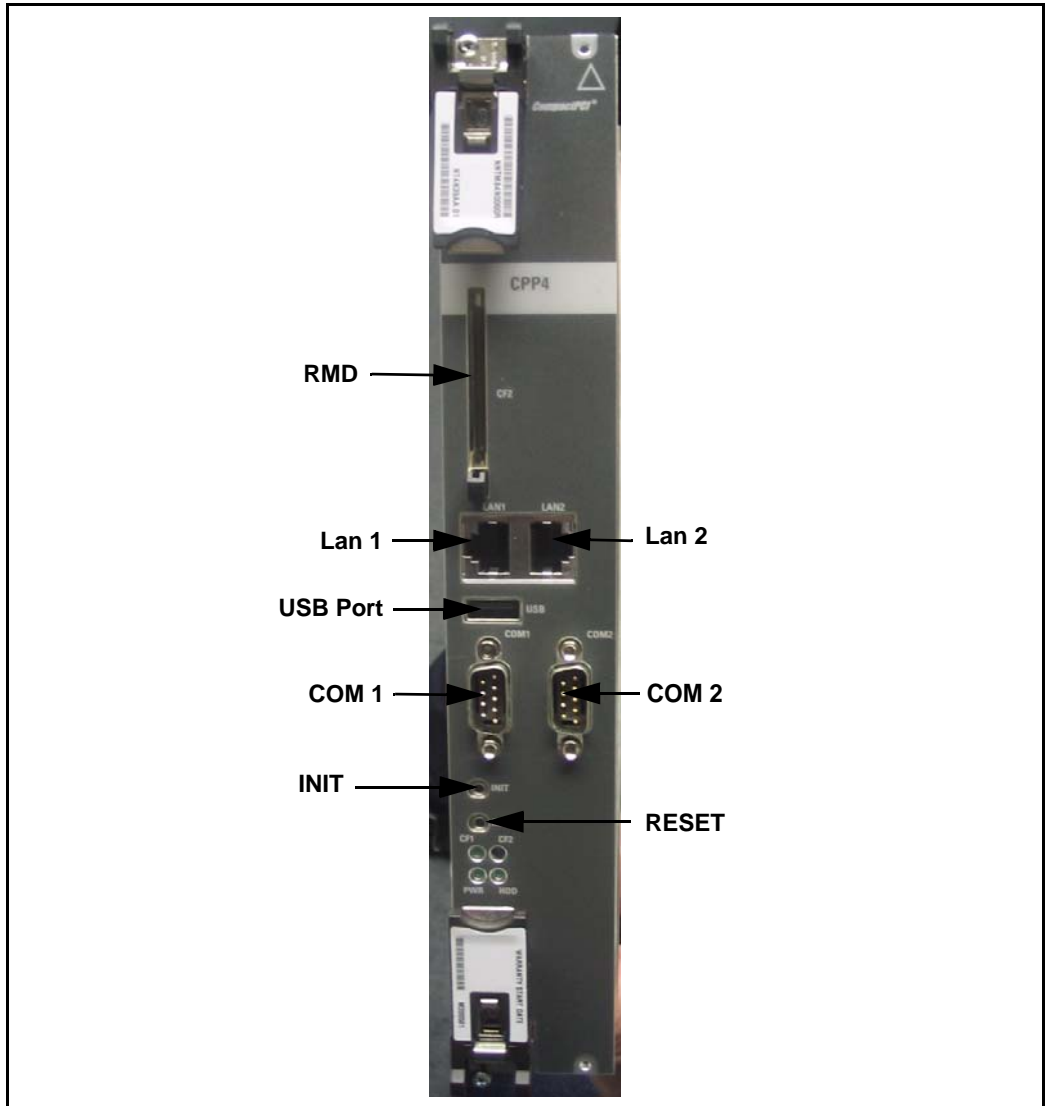





**Figure 13**  
**CP PIV Card location**

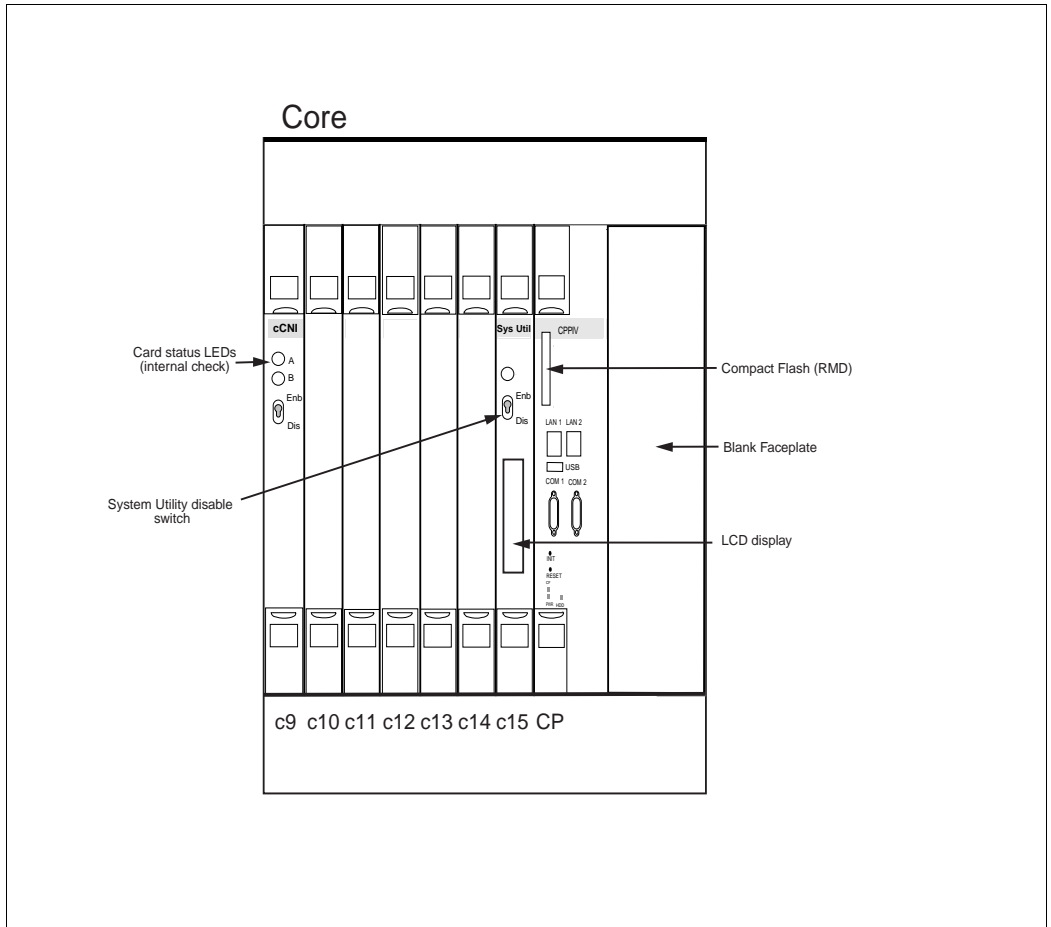

## Upgrading Core 1

### Procedure 5

#### Checking that Core 0 is active

To upgrade Core 1, verify that Core 0 is the active side performing call processing:

- 1    Verify that Core 0 is active.

**LD 135**            Load program

**STAT CPU**        Obtain status of the CPUs

- 2    If Core 1 is active, make Core 0 active:

**SCPU**            Switch to Core 0 (if necessary)

**\*\*\*\***            Exit program

---

**End of Procedure**

---

### Procedure 6

#### Checking that Clock Controller 0 is active

- 1    Check the status of the Clock Controllers:

**LD 60**            Load program

**SSCK 0**           Obtain the status of Clock Controller 0

**SSCK 1**           Obtain the status of Clock Controller 1

- 2    If Clock Controller 1 is active, switch to Clock Controller 0.

**SWCK**            Switch to Clock Controller 0 (if necessary)

**DIS CC 1**        Disable Clock Controller 1

**\*\*\*\***            Exit the program

- 3    Faceplate disable Clock Controller 1.

---

**End of Procedure**

---

**Procedure 7****Checking that Ring 0 is active**

- 1** Check the status of Ring 0.

**LD 39** Load program

**STAT RING 0** Obtain the status of Ring 0  
(Ring state should be HALF/HALF)

- 2** Disable Ring auto recovery.

**LD 39** Load program

**ARCV OFF** Set or reset auto-recovery operation for ring

- 3** Swap to Ring 0.

**LD 39** Load program

**SWRG 0** Switch call processing to ring 0

- 4** Disable Ring 1.

**LD 39** Load program

**DIS RING 1** Disable all FIJI cards on side 1

---

**End of Procedure**

---

**Procedure 8**  
**Splitting the Cores**

- 1 From Core/Net 0, enter the SPLIT command from LD 135.

**LD 135**            Load program

**SPLIT**            Split the Cores

**\*\*\*\***            Exit program

- 2 Hardware disable all CNI cards in Core 1.



The system is now in split mode, with call processing on Core 0 with Clock Controller 0 active and Ring 0 driving Full.

---

**End of Procedure**

---

## Removing Core 1 CP PII card and MMDU


### Procedure 9

#### Removing the Core 1 CP PII processor and MMDU

- 1 Disconnect and label the LAN1 and LAN 2 cables from the Core 1 CP PII card faceplate. See Figure 14.


**Figure 14**

**CP PII faceplate connections**

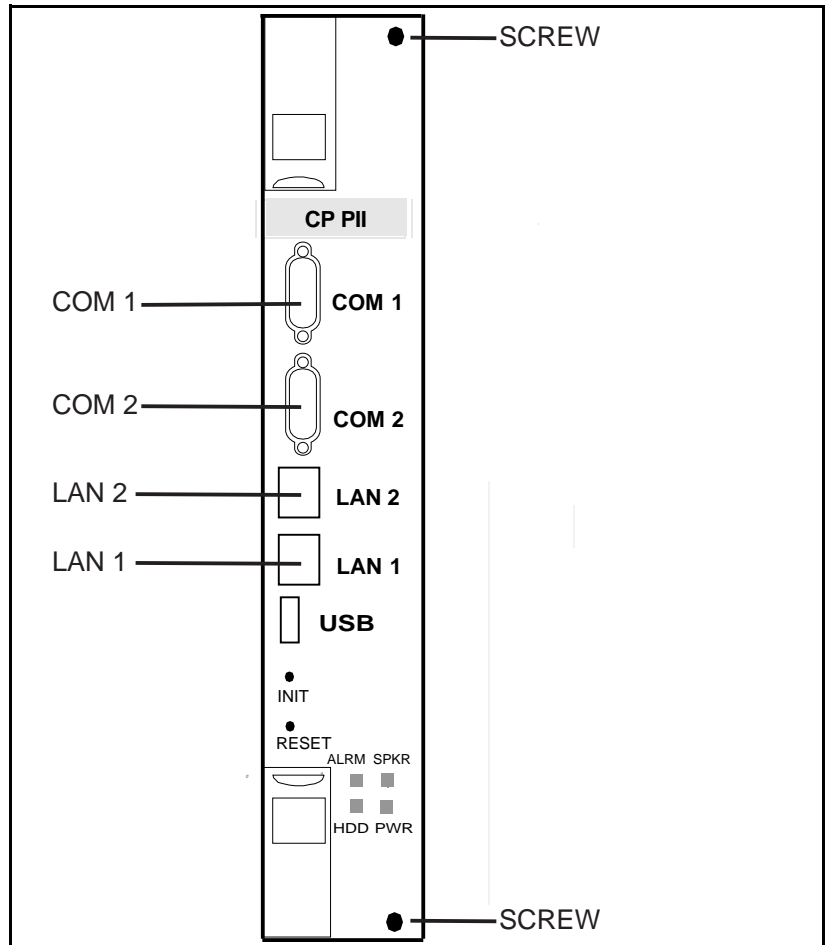

- 2 Disconnect and label the COM 1 and COM 2 cables from the Core 1 CP PII card faceplate. See Figure 14 on page 54.
- 3 Unscrew and unlatch the Core 1 CP PII card.
- 4 Pull the Core 1 CP PII card from its slot.
- 5 Remove the rear access plate on the left side of the Core 1 module. See Figure 15.

**Figure 15**  
**NT4N46 Core/Net module**

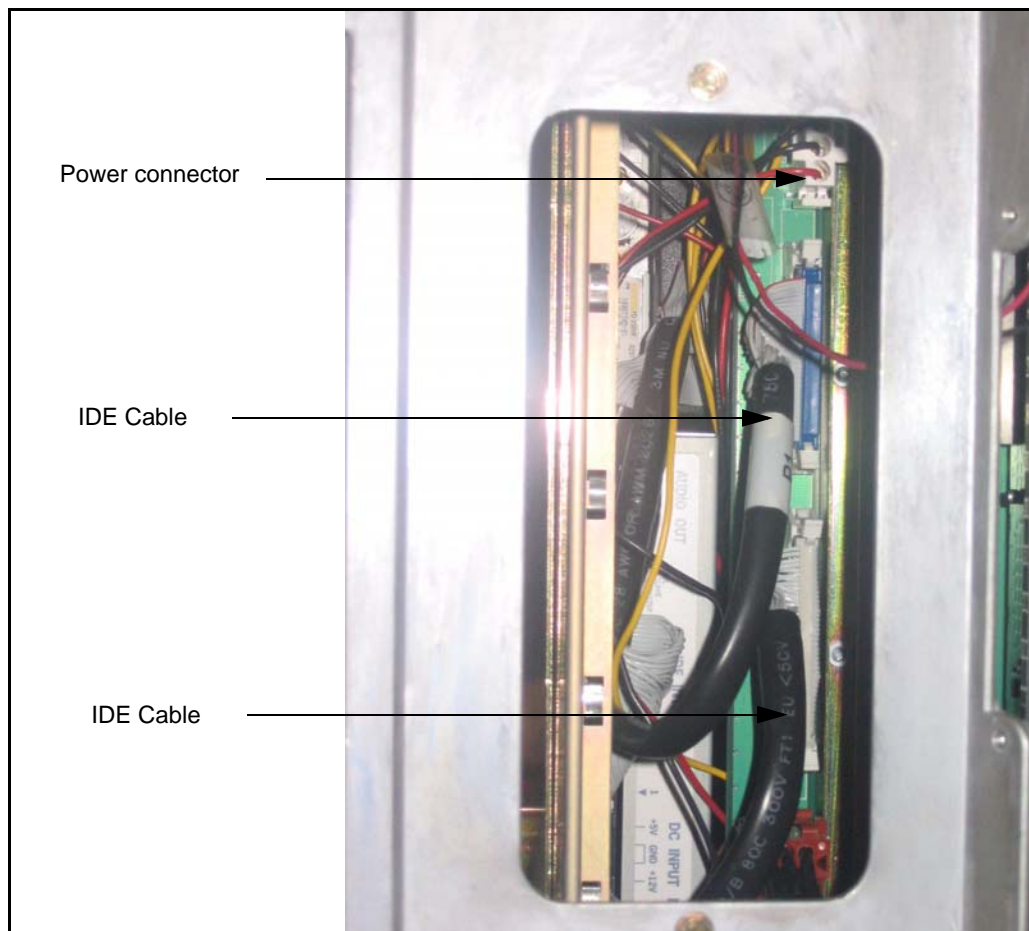

- 6 From the rear access point of the Core 1 shelf, remove the MMDU power cable from the backplane.
- 7 From the rear access point of the Core 1 shelf, remove the two IDE cables from the backplane. See Figure 15 on [page 55](#).
- 8 Unscrew the MMDU from the front of Core 1.
- 9 Slowly pull the MMDU from its slot. Ensure the IDE and power cables do not catch on other equipment as you remove the MMDU.
- 10 Retain the MMDU (and database backup) in a safe and secure location until the successful completion of this upgrade.

**IMPORTANT!**

Database backup information, the MMDU, and original CP PII card should be preserved for a minimum of 5 days.

---

**End of Procedure**

---


## Installing Core 1 CP PIV card and blank faceplate

**Procedure 10****Installing the Core 1 CP PIV processor and blank faceplate**

- 1 Attach the blank faceplate to the empty MMDU slot using the supplied screws.
- 2 Insert the CP PIV card into the empty CP slot in Core 1. Seat the card and secure the latches and screws.
- 3 Attach the COM 1 and COM 2 cables to the CP PIV card faceplate. See Figure 16 on [page 57](#).
- 4 Attach the LAN 2 cable to the CP PIV faceplate connector on Core 1. Do not connect the LAN 1 cable at this point.



**Figure 16**  
**CP PIV faceplate connections**

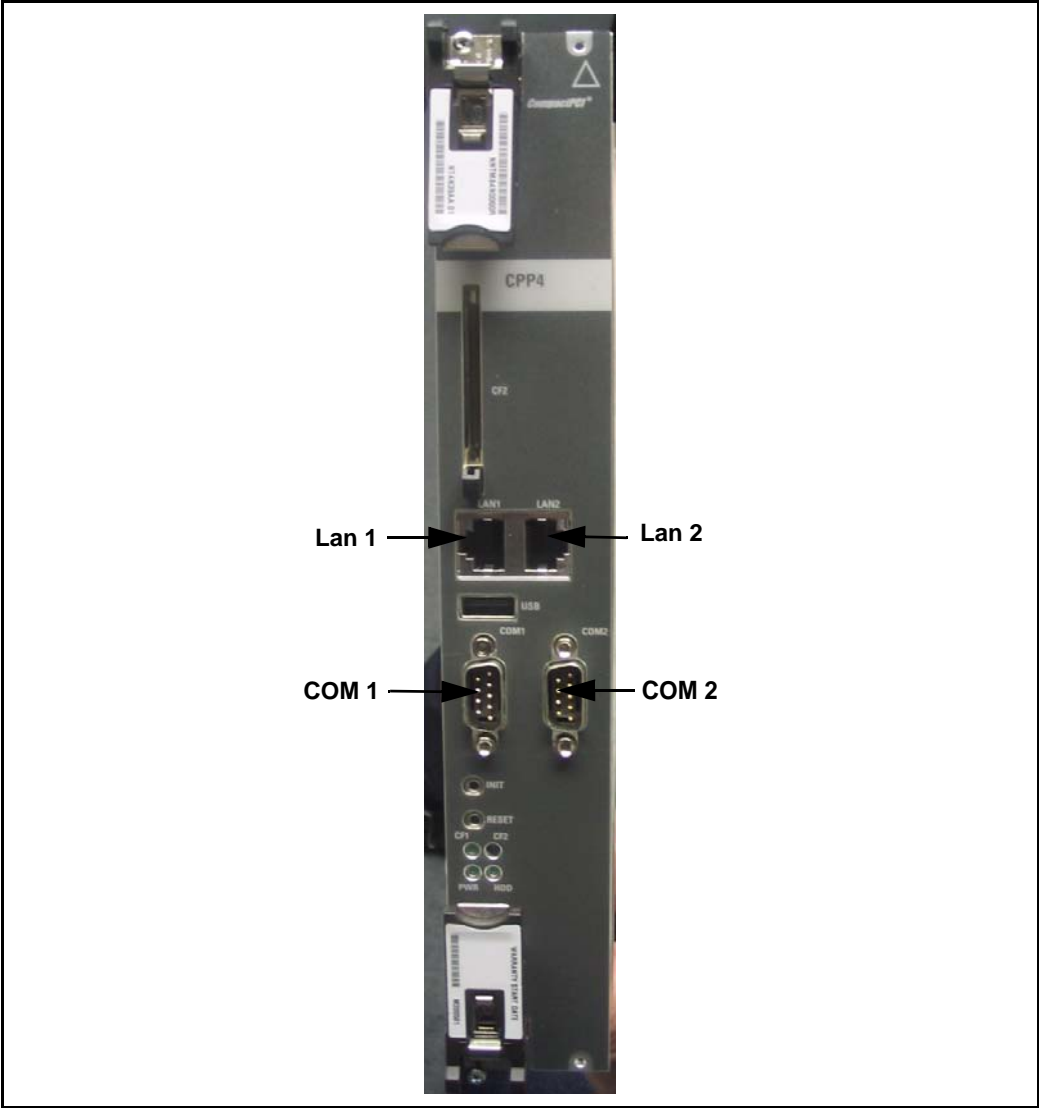

- 5 Do not attach the LAN 1 and LAN 2 cables to the CP PIV card faceplate at this point in the upgrade. These cables are attached once both Cores are upgraded.

---

**End of Procedure**

---

## **CS 1000 Release 7.5 upgrade**

### **Upgrading the software**

Procedure 11 outlines the steps involved in installing CS 1000 Release 7.5 for the CP PIV processor.

#### **Procedure 11**

##### **Upgrading the software**

- 1 Check that a terminal is now connected to COM 1port in CP 1. The settings for the terminal are:
  - a. Terminal type: VT100
  - b. 9600 Baud
  - c. Data bits: 8
  - d. Parity: none
  - e. Stop bits: 1
  - f. Flow control: none
- 2 Insert the RMD into the CF card slot on Call Processor 1 (inactive).
- 3 Perform a KDIF in LD 143.
- 4 Press the manual RESET button the Call Processor 1 (inactive) card faceplate.

- 5 Call up the Software Installation Program during a SYSLOAD. During SYSLOAD, the following prompt appears:

Read boot parameters from:

F: Faceplate compact flash

H: Hard Drive

0 [H]

Press F to boot from the compact flash (which contains the software).

For the CP PIV upgrade, the **F** must be in uppercase.

- 6 Enter <CR> at the Install Tool Menu.

**Note:** Blank CF prompts begin here.

```
Mounting /cf2
Found /cf2/nvram.sys
Mounting /boot|
Found /boot/nvram.sys

                                Selecting nvram file from 2
sources

Read boot parameters from:
F: Faceplate compact flash
H: Hard Drive

    10 [F]

Press <CR> when ready

Reading boot parameters from /boot/nvram.sys

Press any key to stop auto-boot...
```

```
Communication Server 1000 Software/Database/BOOTROM RND Install Tool
=====

Avaya

Communication Server 1000 Software
Install Tool version 29
Copyright 1992 - 2007

Please press <CR> when ready ...

*****
WARNING:

This software does not support TMs configured on PE/EPE
shelves. Upgrading to this software release will permanently
disable all TMs configured on PE/EPE and will not allow new
TMs to be configured.

Proceed with the upgrade? (Y/N) y

*****
WARNING:

Upgrading from pre-Release 4.5 software to Release 4.5 or higher
will result in the system PBT passwords being reset to default.

Proceed with the upgrade? (Y/N) y
```

- 7 The system then enters the Main Menu for keycode authorization.

```

                M A I N      M E N U

The Software Installation Tool will install or
upgrade Communication Server 1000 Software,
Database and the CP-BOOTROM. You will be
prompted throughout the installation and given
the opportunity to quit at any time.

Please enter:

<CR> -> <u> - To Install menu
        <t> - To Tools menu.
        <q> - Quit.
        Enter Choice> <u>
```

The system searches for available keycode files in the “keycode” directory on the RMD. If no keycode file is found, the system displays the following menu:

```

Communication Server 1000 Software/Database/
BOOTROM RMD Install Tool
=====
=====

No keycode files are available on the removable
media.

Please replace the RMD containing the keycode
file(s).

Please enter:

        <CR> -> <a> - RMD is now in the drive.
        <q> - Quit.
        Enter choice>
```

At this point, either replace the RMD or quit the installation. If you select option "<q> - Quit.", the system requires confirmation.

```

Communication Server 1000 Software/Database/
BOOTROM RMD Install Tool

=====
=====

You selected to quit. Please confirm.

Please enter:

    <CR> -> <y> - Yes, quit.

    <n> - No, DON'T quit.

Enter choice>

```

If "y" (quit) is selected, the system prints "INST0127 Keycode file is corrupted. Check Keycode file." and returns to the installation main menu.

After accessing the RMD containing the valid keycode(s), press <CR>. The system displays the keycode file(s) available as in the following example:

```

The following keycode files are available on the
removable media:

Name                               Size   Date       Time
-----
<CR> -> <1> -keycode.kcd 1114 mon-d-year hr:min
<2> - KCport60430m.kcd  1114 mon-d-year hr:min
<q> - Quit

Enter choice> 2

```

**Note:** A maximum of 20 keycode files can be stored under the "keycode" directory on the RMD. The keycode files must have the same extension ".kcd".

- 8 Select the keycode to be used on the system. The system validates the selected keycode and displays the software release and machine type authorized.

```
Validating keycode ...  
  
Copying "/cf2/keycode/KCport60430m.kcd" to "/u/  
keycode" -  
  
Copy OK: 1114 bytes copied  
  
The provided keycode authorizes the install of  
xxxx software (all subissues) for machine type  
xxxx (CP PIV processor on <system>).
```

**Note:** The software release displayed depends on the keycode file content. The system requests keycode validation.

```
Communication Server 1000 Software/Database/  
BOOTROM RMD Install Tool  
  
=====
```

Please confirm that this keycode matches the  
System S/W on the RMD.

Please enter:

          <CR> -> <y> - Yes, the keycode matches.  
Go on to Install Menu.

          <n> - No, the keycode does not match.  
Try another keycode.

Enter choice>

- 9 If the keycode matches, enter <CR> to continue the installation. The system displays the Install Menu. Select option "<a>".

**Note:** Option A uses the existing db from the FMD. External database backup is Option B.

```

Communication Server 1000 Software/Database/
BOOTROM RMD Install Tool
=====

I N S T A L L       M E N U

      The Software Installation Tool will
install or upgrade Communication Server 1000
Software, Database and the CP-BOOTROM. You will be
prompted throughout the installation and given the
opportunity to quit at any time.

      Please enter:

<CR> -> <a> - To install Software, CP-BOOTROM.

      <b> - To install Software, Database,
CP-BOOTROM.

      <c> - To install Database only.

      <d> - To install CP-BOOTROM only.

      <t> - To go to the Tools menu.

      <k> - To install Keycode only.

      For Feature Expansion, use OVL143.

      <p> - To install 3900 set Languages.

      <q> - Quit.

Enter Choice> <a>

```



- 10 The system requires the insertion of the RMD containing the software to be installed.

```
Communication Server 1000 Software/Database/  
BOOTROM RMD Install Tool  
  
=====
```

Please insert the Removable Media Device into the  
drive on Core x.

Please enter:

          <CR> -> <a> - RMD is now in drive.  
Continue with s/w checking.

          <q> - Quit.

Enter choice> <CR>

- 11 If the RMD containing the software is already in the drive, select option "<a> - RMD is now in drive. Continue with s/w checking." (or simply press <CR>) to continue. If the RMD is not yet in the drive, insert it and then press <CR>.
- 12 The system displays the release of the software found on RMD under the "swload" directory and requests confirmation to continue the installation.

```
Communication Server 1000 Software/Database/  
BOOTROM RMD Install Tool  
  
=====
```

The RMD contains System S/W version xxxx.

Please enter:

<CR> -> <y> - Yes, this is the correct  
version. Continue.

<n> - No, this is not the correct version.  
Try another RMD or a different keycode.

Enter choice> <CR>

**Note:** If the RMD contains the correct software release, select option "<y> - Yes, this is the correct version. Continue." (or simply press <CR>) to continue. If the software release is not correct and you want to replace the RMD, insert the correct RMD in the drive and then press <CR>. If you want to replace the keycode, select option "<n> - No, this is not the correct version".

**13** Choosing Yes for the Dependency Lists installation.

**Note:** If Dependency Lists are not installed on media, the following prompts do not appear. Proceed to step 14 on [page 68](#).

Do you want to install Dependency Lists?

Please enter:

<CR> -> <y> - Yes, Do the Dependency Lists installation

<n> - No, Continue without Dependency Lists installation

Enter choice>

The default choice is YES as shown in the prompt.

If the choice is no, then the following prompt will appear for the confirmation:

Are you sure?

Please enter:

<CR> -> <n> - No, Go to the Dependency List menu

<y> - Yes, Go to the next menu

Enter choice>

The default choice is NO which will return the user to deplist menu.

Enable Automatic Centralized Software Upgrade (CSU) Feature?

Please enter:

<CR> -> <y> - Yes

<n> - No

Enter choice>

**14** Select to enable/disable CSU option.

**Note:** if Sequential is selected <1>, upgrades to the Avaya CS 1000 Media Gateway 1000E (Avaya MG 1000E) systems are performed across the LAN in a sequential manner. One MG 1000E is upgraded at a time. No other MG 1000E upgrades are initiated until the current MG 1000E completes its installation.

If Simultaneous is selected <2>, upgrades to the MG 1000Es are performed simultaneously across the LAN. Up to eight MG 1000Es are upgraded at the same time. If there are more than eight MG 1000Es, the upgrade to the next MG 1000E begins after the upgrade of one MG 1000E is complete. The following warning is presented to the installer:

**WARNING:**

Call Processing is not guaranteed to operate on the call server during simultaneous upgrades.  
Do you wish to proceed? (y/n)

Set Automatic Centralized Software Upgrade Mode to:

Please enter:

<CR> -> <1> - Sequential

<2> - Simultaneous

Enter choice>

>Processing the install control file ...

>Installing release 0600x

- 15 The PSDL files menu appears. Enter the appropriate choice for the site's geographic location.

```
*****
PSDL INSTALLATION MENU

The PSDL contains the loadware for all
downloadable cards in the system and loadware for
M3900 series sets.

*****
Select ONE of the SEVEN PSDL files:

1. Global 10 Languages
2. Western Europe 10 Languages
3. Eastern Europe 10 Languages
4. North America 6 Languages
5. Spare Group A
6. Spare Group B
7. Packaged Languages
[Q]uit, <CR> - default

By default option 1 will be selected.
Enter your choice ->x

>Copying new PSDL ...
```

- 16 The installation summary screen appears. Verify the parameters and enter <CR> when ready.

**17** Enter <CR> to confirm and continue upgrade.

**Note:** After entering yes below, the system copies the software from RMD to FMD (the files copied are listed). This file copy takes between 5 and 10 minutes to complete.

```
Please enter:

<CR> -> <y> - Yes, start upgrade.

        <n> - No, stop upgrade. Return to the Main
Menu.


        Enter choice>

>Checking system configuration

You selected to upgrade Software release: XXXX to
release: xxxx. This will erase all old system
files.

This will create all necessary directories and
pre-allocate files on the hard disk.

You may continue with software upgrade or quit
now and leave your software unchanged.

Please enter:

        <CR> -> <a> - Continue with upgrade.

        <q> - Quit.

        Enter choice>
```

- 18** Successful installation confirmation appears, enter <CR> to continue.

```
Communication Server 1000 Software/Database/  
BOOTROM RMD Install Tool  
  
=====
```

Software release xxxx was installed successfully  
on Core x.

All files were copied from RMD to FMD.

Please press <CR> when ready ...

- 19** Press "Enter" after checking the Installation summary.

- 20** Upon returning to the main install menu, enter **q** to quit.

```

      I N S T A L L   M E N U

      The Software Installation Tool will
      install or upgrade Succession Enterprise System
      Software, Database and the CP-BOOTROM. You will be
      prompted throughout the installation and given the
      opportunity to quit at any time.

      Please enter:

      <CR> -> <a> - To install Software, CP-BOOTROM.

      <b> - To install Software, Database,
      CP-BOOTROM.

      <c> - To install Database only.

      <d> - To install CP-BOOTROM only.

      <t> - To go to the Tools menu.

      <k> - To install Keycode only.

      For Feature Expansion, use OVL143.

      <p> - To install 3900 set Languages.

      <q> - Quit.

      Enter Choice> q
```



- 21 The system then prompts you to confirm and reboot. Enter <CR> to quit. Enter <CR> again to reboot.

```
You selected to quit. Please confirm.

Please enter:

<CR> -> <y> - Yes, quit.

        <n> - No, DON'T quit.

Enter choice> <CR>

You selected to quit the Install Tool.

You may reboot the system or return to the Main
Menu.

-----

DO NOT REBOOT USING RESET BUTTON!!!

-----

Please enter:

<CR> -> <a> - Reboot the system.

        <m> - Return to the Main menu.

Enter Choice> <CR>

>Removing temporary file "/u/disk3521.sys"
>Removing temporary file "/u/disk3621.sys"
>Rebooting system ...
```

At this point the system reloads and initializes.

---

**End of Procedure**

---

## **Verifying the upgraded database**

### **Procedure 12**

#### **Verifying the upgraded database**

- 1 Print ISSP (system software issue and patches)

**LD 22** Load program

**REQ** ISSP

**\*\*\*\*** Exit program

- 2 Print the system configuration record in LD 22 and compare the output with the preupgraded configuration record.

**LD 22** Load program

**REQ** PRT

**TYPE** CFN

**\*\*\*\*** Exit program

- 3 Print the SLT in LD 22. This output provides used and unused ISM parameters. Compare with preupgrade SLT output.

**LD 22** Load program

**REQ** SLT

**\*\*\*\*** Exit program

- 4 Print the customer data block(s) in LD 21.

<b>LD 21</b>	Load program
<b>REQ</b>	PRT
<b>TYPE</b>	CDB
<b>CUST</b>	xx
<b>****</b>	Exit program



Core 0 is now active, clock 0 is active, CNI is disabled in Core 1. The system is in split mode.

---

**End of Procedure**

---

## Check for Peripheral Software Download to Core 1

Enter LD 22 and print Target peripheral software version. The Source peripheral software version was printed in “Printing site data” on [page 26](#). If there is a difference between the Source and Target peripheral software version:

- A forced download occurs during initialization when coming out of parallel reload.
- System initialization takes longer.
- The system drops established calls on IPE.

Load LD 22 and print Target peripheral software version.

<b>LD 22</b>	
<b>REQ</b>	PRT

<b>TYPE</b>	PSWV
****	Exit program

## Reconfigure I/O ports and call registers

### Procedure 13

#### Reconfiguring I/O ports and call registers

- 1 Evaluate the number of call registers and 500 telephone buffers that are configured for the system (suggested minimum values are 20,000 and 1000 respectively). See *Avaya Communication Server 1000M and Meridian 1 Large System Planning and Engineering* (NN43021-220). If changes are required, reconfigure the values in LD 17:

<b>LD 17</b>	Load program
--------------	--------------

**CHG**

**CFN**

**PARM YES**

<b>500B 1000</b>	Use 1000 as a minimum value
------------------	-----------------------------

<b>NCR 20000</b>	Use 20000 as a minimum value
------------------	------------------------------

****	Exit program
------	--------------

---

**End of Procedure**

---



At this point, all applications must be shut down.

**Procedure 14**  
**Rebooting Core 1**



**CAUTION**

**Service Interruption**

The INI may take up to 15 minutes to complete.



**CAUTION**

**Service Interruption**

Call processing is interrupted for approximately 60 minutes while the procedures are completed.

At this stage, Core 0 is still the active call processor with Clock Controller 0 active. The following procedure will transfer call processing from Core 0 to Core 1, switching Clock Controller from 0 to 1.

- 1 In Core/Net 0 only, unseat the Core Processor card.
- 2 Press the 'INIT' button on the CP PIV card faceplate of Core 1 to initialize the system.
- 3 Wait for "DONE" and then "INI" messages to display before you continue..



**CAUTION**

**Service Interruption**

Allow the system to recover from all downloads after the INI completes.

---

**End of Procedure**

---



Core 1 is now active with ring 1 drives full. Clock Controller 1 is active. Call processing should be active on Core/Net 1.

## Testing Core/Net 1

### Procedure 15 Testing Core/Net 1

- 1 Check dial-tone.
- 2 Stat D-channels:

#### **LD 96**

**STAT DCH**            Stat all D-channels  
\*\*\*\*                Exit program

- 3 Stat all T1 interfaces:

#### **LD 60**

**STAT**                Stat all DTI and PRI  
\*\*\*\*                Exit program

- 4 Stat network cards:

#### **LD 32**

**STAT x**              x = loop number  
\*\*\*\*                Exit program

- 5 Print status of all controllers:

#### **LD 97**

**REQ**                PRT  
**TYPE**              XPE (returns status of all controller cards)  
\*\*\*\*                Exit program

- 6 Make internal, external and network calls.
- 7 Check attendant console activity.

- 8 Check DID trunks.



Call processing should be active on Core/Net 1.

---

**End of Procedure**

---

## Upgrading Core 0


### Removing Core 0 CP PII card and MMDU

#### Procedure 16

#### Removing the Core 0 CP PII processor and MMDU


- 1 Disconnect and label the LAN1 and LAN 2 cables from the Core 0 CP PII card faceplate. See Figure 17 on [page 79](#).
- 2 Disconnect and label the COM 1 and COM 2 cables from the Core 0 CP PII card faceplate. See Figure 17 on [page 79](#).
- 3 Unscrew and unlatch the Core 0 CP PII card. See Figure 17 on [page 79](#).
- 4 Pull the Core 0 CP PII card from its slot.
- 5 Remove the rear access plate on the left side of the Core 0 module. See Figure 18 on [page 80](#).

**Figure 17**  
**CP PII faceplate connections**

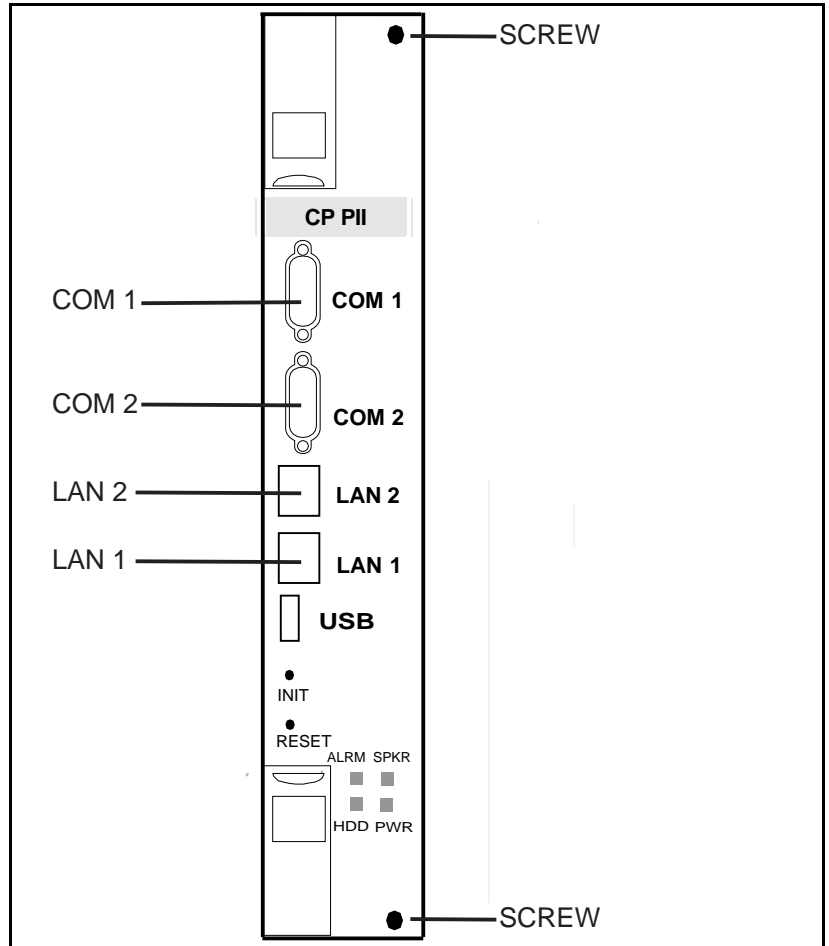



**Figure 18**  
**NT4N46 Core/Net module**

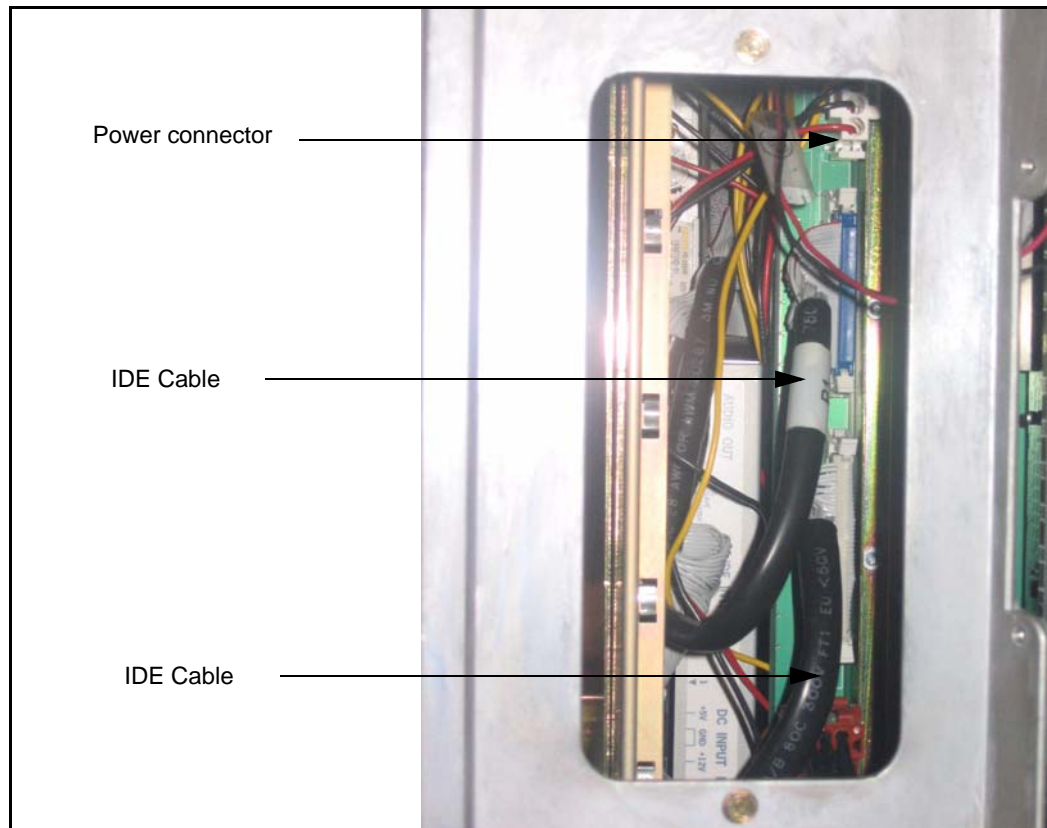

- 6** From the rear access point of the Core 0 shelf, remove the MMDU power cable from the backplane.
- 7** From the rear access point of the Core 0 shelf, remove the two IDE cables from the backplane.
- 8** Unscrew the MMDU from the front of Core 0.
- 9** Slowly pull the MMDU from its slot. Ensure the IDE and power cables do not catch on other equipment as you remove the MMDU.

- 10 Retain the MMDU (and database backup) in a safe and secure location until the successful completion of this upgrade.

**IMPORTANT!**

Database backup information and MMDU should be preserved for a minimum of 5 days.

---

**End of Procedure**


---

## Installing Core 0 CP PIV card and blank faceplate

**Procedure 17****Installing the Core 0 CP PIV processor and blank faceplate**

- 1 Attach the blank faceplate to the empty MMDU slot using the supplied screws.
- 2 Insert the CP PIV card into the empty CP slot in Core 0. Seat the card and secure the latches and screws.
- 3 Attach the COM 1 and COM 2 cables to the CP PIV card faceplate. See Figure 19 on [page 82](#).

**Figure 19**  
**CP PIV faceplate connections**

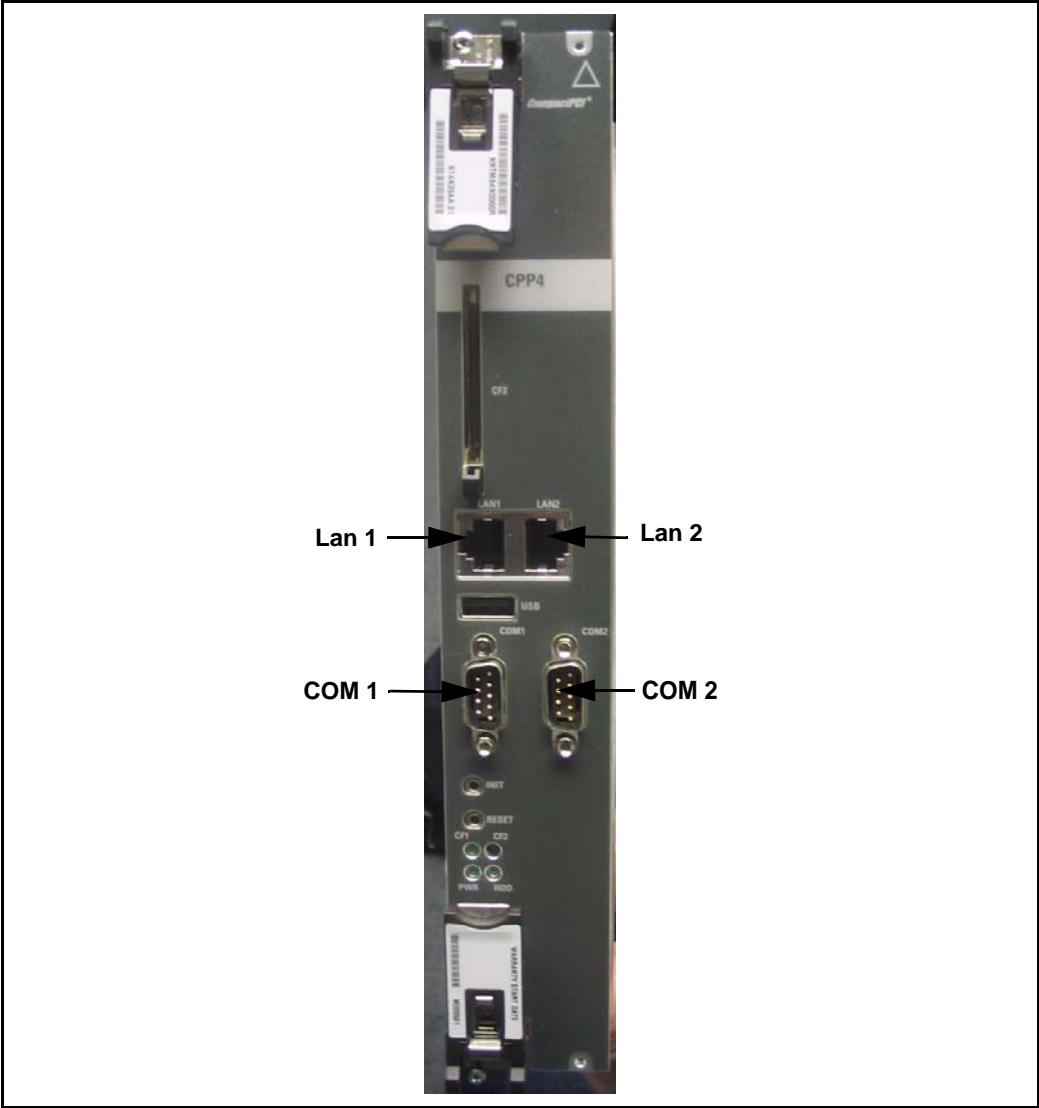

- 4 Attach the LAN 1 and LAN 2 cables to the CP PIV card faceplate at this point in the upgrade.

---

**End of Procedure**

---

## Power up Core 0

### Procedure 18

#### Preparing for power up

- 1 Confirm that a terminal is connected to the J25 I/O panel connector on Core/Net 0.

**Note:** A maintenance terminal is required to access the Core/Net modules during the upgrade.

- 2 Connect a terminal to the J25 port on the I/O panel in Core 0.
- 3 Check the terminal settings as follows:
  - a. 9600 Baud
  - b. 8 data
  - c. parity none
  - d. 1 stop bit
  - e. full duplex
  - f. XOFF

**Note:** If only one terminal is used for both Cores, the terminal will have to be switched from side-to-side to access each module. An "A/B" switch box can also be installed to switch the terminal from side to side.

---

**End of Procedure**

---

## CS 1000 Release 7.5 upgrade

### Upgrading the software

Procedure 19 outlines the steps involved in installing CS 1000 Release 7.5 for the CP PIV processor.

#### Procedure 19

#### Upgrading the software

- 1 Check that a terminal is now connected to COM 1port in CP 1. The settings for the terminal are:
  - a. Terminal type: VT100
  - b. 9600 Baud
  - c. Data bits: 8
  - d. Parity: none
  - e. Stop bits: 1
  - f. Flow control: none
- 2 Insert the RMD into the CF card slot on Call Processor 1 (inactive).
- 3 Perform a KDIF in LD 143.
- 4 Press the manual RESET button the Call Processor 1 (inactive) card faceplate.
- 5 Call up the Software Installation Program during a SYSLOAD. During SYSLOAD, the following prompt appears:

Read boot parameters from:

F: Faceplate compact flash

H: Hard Drive

0 [H]

Press F to boot from the compact flash (which contains the software).

For the CP PIV upgrade, the **F** must be in uppercase.

**6** Enter <CR> at the Install Tool Menu.

**Note:** Blank CF prompts begin here.

```
Mounting /cf2
Found /cf2/nvram.sys
Mounting /boot|
Found /boot/nvram.sys

                                Selecting nvram file from 2
sources

Read boot parameters from:
F: Faceplate compact flash
H: Hard Drive

    10 [F]

Press <CR> when ready

Reading boot parameters from /boot/nvram.sys

Press any key to stop auto-boot...
```

```

Communication Server 1000 Software/Database/ROOTON AND Install Tool
=====

                                Avaya

Communication Server 1000 Software

Install Tool version 29

Copyright 1992 - 2007

Please press <CR> when ready ...

*****
WARNING:

This software does not support TMS configured on PE/EPE
shelves. Upgrading to this software release will permanently
disable all TMS configured on PE/EPE and will not allow new
TMS to be configured.

Proceed with the upgrade? (Y/N) y

xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx
WARNING:

Upgrading from pre-release 4.5 software to Release 4.5 or higher
will result in the system PDT passwords being reset to default.

Proceed with the upgrade? (Y/N) y

```

- 7 The system then enters the Main Menu for keycode authorization.

**M A I N M E N U**

The Software Installation Tool will install or upgrade Communication Server 1000 Software, Database and the CP-BOOTROM. You will be prompted throughout the installation and given the opportunity to quit at any time.

Please enter:

<CR> -> <u> - To Install menu

<t> - To Tools menu.

<q> - Quit.

Enter Choice> <u>

The system searches for available keycode files in the “keycode” directory on the RMD. If no keycode file is found, the system displays the following menu:

Communication Server 1000 Software/Database/  
BOOTROM RMD Install Tool

=====  
=====

No keycode files are available on the removable media.

Please replace the RMD containing the keycode file(s).

Please enter:

<CR> -> <a> - RMD is now in the drive.

<q> - Quit.

Enter choice>



At this point, either replace the RMD or quit the installation. If you select option "<q> - Quit.", the system requires confirmation.

```

Communication Server 1000 Software/Database/
BOOTROM RMD Install Tool

=====
=====

You selected to quit. Please confirm.

Please enter:

    <CR> -> <y> - Yes, quit.

    <n> - No, DON'T quit.

Enter choice>

```

If "y" (quit) is selected, the system prints "INST0127 Keycode file is corrupted. Check Keycode file." and returns to the installation main menu.

After accessing the RMD containing the valid keycode(s), press <CR>. The system displays the keycode file(s) available as in the following example:

```

The following keycode files are available on the
removable media:

Name                               Size   Date       Time
-----
<CR> -> <1> -keycode.kcd 1114 mon-d-year hr:min
<2> - KCport60430m.kcd   1114 mon-d-year hr:min
<q> - Quit

Enter choice> 2

```

**Note:** A maximum of 20 keycode files can be stored under the "keycode" directory on the RMD. The keycode files must have the same extension ".kcd".

- 8 Select the keycode to be used on the system. The system validates the selected keycode and displays the software release and machine type authorized.

```
Validating keycode ...  
  
Copying "/cf2/keycode/KCport60430m.kcd" to "/u/  
keycode" -  
  
Copy OK: 1114 bytes copied  
  
The provided keycode authorizes the install of  
xxxx software (all subissues) for machine type  
xxxx (CP PIV processor on <system>).
```

**Note:** The software release displayed depends on the keycode file content. The system requests keycode validation.

```
Communication Server 1000 Software/Database/  
BOOTROM RMD Install Tool  
  
=====
```

Please confirm that this keycode matches the  
System S/W on the RMD.

Please enter:

                  <CR> -> <y> - Yes, the keycode matches.  
Go on to Install Menu.

                  <n> - No, the keycode does not match.  
Try another keycode.

Enter choice>

- 9 If the keycode matches, enter <CR> to continue the installation. The system displays the Install Menu. Select option "<a>".

**Note:** Option A uses the existing db from the FMD. External database backup is Option B.

```
Communication Server 1000 Software/Database/  
BOOTROM RMD Install Tool  
=====
```

I N S T A L L       M E N U

          The Software Installation Tool will  
install or upgrade Communication Server 1000  
Software, Database and the CP-BOOTROM. You will be  
prompted throughout the installation and given the  
opportunity to quit at any time.

          Please enter:

<CR> -> <a> - To install Software, CP-BOOTROM.

          <b> - To install Software, Database,  
CP-BOOTROM.

          <c> - To install Database only.

          <d> - To install CP-BOOTROM only.

          <t> - To go to the Tools menu.

          <k> - To install Keycode only.

          For Feature Expansion, use OVL143.

          <p> - To install 3900 set Languages.

          <q> - Quit.

Enter Choice> <a>

- 10** The system requires the insertion of the RMD containing the software to be installed.

```
Communication Server 1000 Software/Database/  
BOOTROM RMD Install Tool  
  
=====
```

Please insert the Removable Media Device into the drive on Core x.

Please enter:

          <CR> -> <a> - RMD is now in drive.  
Continue with s/w checking.

          <q> - Quit.

Enter choice> <CR>

- 11 If the RMD containing the software is already in the drive, select option "<a> - RMD is now in drive. Continue with s/w checking." (or simply press <CR>) to continue. If the RMD is not yet in the drive, insert it and then press <CR>.
- 12 The system displays the release of the software found on RMD under the "swload" directory and requests confirmation to continue the installation.

```
Communication Server 1000 Software/Database/  
BOOTROM RMD Install Tool  
  
=====
```

The RMD contains System S/W version xxxx.

Please enter:

<CR> -> <y> - Yes, this is the correct  
version. Continue.

<n> - No, this is not the correct version.  
Try another RMD or a different keycode.

Enter choice> <CR>

**Note:** If the RMD contains the correct software release, select option "<y> - Yes, this is the correct version. Continue." (or simply press <CR>) to continue. If the software release is not correct and you want to replace the RMD, insert the correct RMD in the drive and then press <CR>. If you want to replace the keycode, select option "<n> - No, this is not the correct version".

**13** Choosing Yes for the Dependency Lists installation.

**Note:** If Dependency Lists are not installed on media, the following prompts do not appear. Proceed to the next step.

Do you want to install Dependency Lists?

Please enter:

<CR> -> <y> - Yes, Do the Dependency Lists installation

<n> - No, Continue without Dependency Lists installation

Enter choice>

The default choice is YES as shown in the prompt.

If the choice is no, then the following prompt will appear for the confirmation:

Are you sure?

Please enter:

<CR> -> <n> - No, Go to the Dependency List menu

<y> - Yes, Go to the next menu

Enter choice>

The default choice is NO which will return the user to deplist menu.

Enable Automatic Centralized Software Upgrade (CSU) Feature?

Please enter:

<CR> -> <y> - Yes

<n> - No

Enter choice>

**14** Select to enable/disable CSU option.

**Note:** if Sequential is selected <1>, upgrades to the MG 1000Es are performed across the LAN in a sequential manner. One MG 1000E is upgraded at a time. No other MG 1000E upgrades are initiated until the current MG 1000E completes its installation.

If Simultaneous is selected <2>, upgrades to the MG 1000Es are performed simultaneously across the LAN. Up to eight MG 1000Es are upgraded at the same time. If there are more than eight MG 1000Es, the upgrade to the next MG 1000E begins after the upgrade of one MG 1000E is complete. The following warning is presented to the installer:

WARNING:  
Call Processing is not guaranteed to operate on the call server during simultaneous upgrades.  
Do you wish to proceed? (y/n)

Set Automatic Centralized Software Upgrade Mode to:

Please enter:

<CR> -> <1> - Sequential

<2> - Simultaneous

Enter choice>

>Processing the install control file ...

>Installing release 0600x

- 15** The PSDL files menu appears. Enter the appropriate choice for the site's geographic location.

```
*****
PSDL INSTALLATION MENU

The PSDL contains the loadware for all
downloadable cards in the system and loadware for
M3900 series sets.

*****
Select ONE of the SEVEN PSDL files:

1. Global 10 Languages
2. Western Europe 10 Languages
3. Eastern Europe 10 Languages
4. North America 6 Languages
5. Spare Group A
6. Spare Group B
7. Packaged Languages
[Q]uit, <CR> - default

By default option 1 will be selected.
Enter your choice ->x

>Copying new PSDL ...
```

- 16** The installation summary screen appears. Verify the parameters and enter <CR> when ready.



- 17 Enter <CR> to confirm and continue upgrade.

**Note:** After entering yes below, the system copies the software from RMD to FMD (the files copied are listed). This file copy takes between 5 and 10 minutes to complete.

```
Please enter:

<CR> -> <y> - Yes, start upgrade.

           <n> - No, stop upgrade. Return to the Main
Menu.

           Enter choice>

>Checking system configuration

You selected to upgrade Software release: XXXX to
release: xxxx. This will erase all old system
files.

This will create all necessary directories and
pre-allocate files on the hard disk.

You may continue with software upgrade or quit
now and leave your software unchanged.

Please enter:

           <CR> -> <a> - Continue with upgrade.

           <q> - Quit.

           Enter choice>
```

- 18** Successful installation confirmation appears, enter <CR> to continue.

```
Communication Server 1000 Software/Database/  
BOOTROM RMD Install Tool  
  
=====
```

Software release xxxx was installed successfully  
on Core x.

All files were copied from RMD to FMD.

Please press <CR> when ready ...

- 19** Press "Enter" after checking the Installation summary.

- 20 Upon returning to the main install menu, enter **q** to quit.

```

                I N S T A L L   M E N U

The Software Installation Tool will
install or upgrade Succession Enterprise System
Software, Database and the CP-BOOTROM. You will be
prompted throughout the installation and given the
opportunity to quit at any time.

Please enter:

<CR> -> <a> - To install Software, CP-BOOTROM.
        <b> - To install Software, Database,
CP-BOOTROM.

        <c> - To install Database only.
        <d> - To install CP-BOOTROM only.
        <t> - To go to the Tools menu.
        <k> - To install Keycode only.

        For Feature Expansion, use OVL143.

        <p> - To install 3900 set Languages.
        <q> - Quit.

Enter Choice> q
```

- 21** The system then prompts you to confirm and reboot. Enter <CR> to quit. Enter <CR> again to reboot.

```
You selected to quit. Please confirm.

    Please enter:

<CR> -> <y> - Yes, quit.

    <n> - No, DON'T quit.


    Enter choice> <CR>

You selected to quit the Install Tool.

You may reboot the system or return to the Main
Menu.


-----

DO NOT REBOOT USING RESET BUTTON!!!

-----


    Please enter:

<CR> -> <a> - Reboot the system.

    <m> - Return to the Main menu.

    Enter Choice> <CR>

>Removing temporary file "/u/disk3521.sys"
>Removing temporary file "/u/disk3621.sys"
>Rebooting system ...
```

At this point the system reloads and initializes.

---

**End of Procedure**

---

## Verifying the upgraded database

### Procedure 20

#### Verifying the upgraded database

- 1 Print ISSP (system software issue and patches)

**LD 22** Load program

**REQ** ISSP

**\*\*\*\*** Exit program



Core 1 is now active, clock 1 is active, FIJI Rings are half /half, CNI is disabled in Core 0. The system is in split mode.

---

**End of Procedure**

---

## Making the system redundant

At this point, Core/Net 0 is ready to be synchronized with Core/Net 1.

### Procedure 21

#### Making the system redundant

- 1 The LAN 1 and LAN 2 cables should be attached to the CP PIV faceplate connectors on Core 0 and Core 1.
- 2 Enter LD 135 and issue the JOIN command. The high speed pipe (HSP) status is now up. This begins the synchronization of the Call Servers.

**LD 135** Load program

**JOIN** Join the 2 CPUs together to become redundant

- 3 Once the synchronization of memories and drives is complete, STAT the CPU and verify that the CPUs are in a true redundant state.

**LD 135**

**STAT CPU**      Obtain status of CPU and memory

\*\*\*\*              Exit the program

```
.stat cpu

cp 0 16 PASS -- STDBY

TRUE REDUNDANT
DISK STATE = REDUNDANT
HEALTH = 20
VERSION = Mar 3 2005, 16:26:40
Side = 0, DRAM SIZE = 512 MBytes

cp 1 16 PASS -- ENBL

TRUE REDUNDANT
DISK STATE = REDUNDANT
HEALTH = 20
VERSION = Mar 3 2005, 16:26:40
Side = 1, DRAM SIZE = 512 MBytes
```

- 4 Tier 1 and Tier 2 health of both Cores must be identical in order to successfully switch service from Core 1 to Core 0. CPUs.

### LD 135

**STAT HEALTH** Obtain status of CPU and memory

\*\*\*\* Exit the program

```
.stat health
Local (Side 0, Active, Redundant):
Components without TIER 1 Health contribution:
=====

    disp 0 15 1:In Service
    sio2 0 15 1:In Service
        cp 0 16:In Service
            ipb 0:In Service
TIER 1 Health Count Breakdown:
=====

    sio8 0 16 1: 0002
    sio8 0 16 2: 0002
        sutl 0 15: 0002
            strn 0 15: 0002
    xsmp 0 15 1: 0002
    cmdu 0 16 1: 0008
        eth 0 16 0: 0002
Local TIER 1 Health Total: 20
```

TIER 2 Health Count Breakdown:

=====

ELAN 16 IP : 47.11.138.150 Health = 2

ELAN 17 IP : 47.11.138.153 Health = 2

Local AML over ELAN Total Health:4

Local Total IPL Health = 6

IPL connection history:3 3 3 3 3 3 3 3 3 3 3 3 3  
3 3 3 3 3 3

Local TIER 2 Health Total:10

Remote (Side 1, Inactive, Redundant):

Components without TIER 1 Health contribution:

disp 1 15 1:In Service

sio2 1 15 1:In Service

cp 1 16:In Service

ipb 1:In Service

TIER 1 Health Count Breakdown:

sio8 1 16 1: 0002

sio8 1 16 2: 0002

sutl 1 15: 0002

strn 1 15: 0002

xsmg 1 15 1: 0002

cmdu 1 16 1: 0008

eth 1 16 0: 0002

Remote TIER 1 Health Total: 20



```
TIER 2 Health Count Breakdown:

=====

ELAN 16 IP : 47.11.138.150 Health = 2

ELAN 17 IP : 47.11.138.153 Health = 2


Remote AML over ELAN Total Health:4

Remote Total IPL health = 6


Remote TIER 2 Health Total:10
```



The system is now operating in full redundant mode with Core/Net 1 active.

---

End of Procedure

---

## Completing the CP PIV upgrade

### Testing the Cores

At this point in the upgrade, Core/Net 0 is tested from active Core/Net 1. Upon successful completion of these tests, call processing is switched and the same tests are performed on Core/Net 1 from active Core/Net 0.

From Core/Net 1, perform these tests:

#### **LD 137**

The CMDU/MMDU commands are not applicable to CP PIV. Instead, the following commands are used in LD 137.

- **STAT FMD**  
display text: **Status of Fixed Media Device (FMD)**  
command parameter: none

- **STAT RMD**  
display text: **Status of Removable Media Device (RMD)**  
command parameter: none

**Procedure 22****Testing Core/Net 0**

**From active Core/Net 1, perform the following tests on Core/Net 0:**

- 1 Perform a redundancy sanity test:

**LD 135**

**STAT CPU** Obtain status of CPU and memory

**TEST CPU** Test the CPU

- 2 Check the LCD states

**a.** Perform a visual check of the LCDs.

**b.** Test and LCDs:

**LD 135****DSPL ALL**

**c.** Check that the LCD display matches the software check.

- 3 Test the System Utility card and the cCNI cards:

**LD 135** Load program

**STAT SUTL** Obtain the status of the System Utility card

**TEST SUTL** Test the System Utility card

**STAT CNI c s** Obtain status of cCNI cards (core, slot)

**TEST CNI c s** Test cCNI (core, slot)

4    Test system redundancy and media devices:

<b>LD 137</b>	Load program
<b>TEST RDUN</b>	Test redundancy
<b>DATA RDUN</b>	Test database integrity
<b>STAT FMD</b>	Status of Fixed Media Device (FMD)
<b>STAT RMD</b>	Status of Removable Media Device (RMD)

5    Test that the system monitors are working:

<b>LD 37</b>	Load program
<b>ENL TTY x</b>	x= system XMS
<b>STAT XSM</b>	Check the system monitors
<b>****</b>	Exit program

6    Clear the display and minor alarms on both Cores:

<b>LD 135</b>	Load program
<b>CDSP</b>	Clear the displays on the cores
<b>CMAJ</b>	Clear major alarms
<b>CMIN ALL</b>	Clear minor alarms

**7** Test the clocks:

- a.** Verify that the clock controller is assigned to the *active* Core.

<b>LD 60</b>	Load program
<b>SSCK <i>x</i></b>	To get the status of the clock controllers ( <i>x</i> is “0” or “1” for Clock 0 or Clock 1)
<b>SWCK</b>	To switch the Clock (if necessary)
<b>****</b>	Exit program

- b.** Verify that the Clock Controllers are switching correctly.

<b>SWCK</b>	Switch the Clock
	<b>Note:</b> You must wait a minimum of one minute for clocks to synchronize.
<b>SWCK</b>	Switch the Clock again

**8** Check dial tone.**9** Check applications.**10** Test the Fiber Rings:

See *Avaya Software Input/Output: Maintenance* (NN43001-711) for more information about LD 39 commands.

- a.** Check that the Fiber Rings operate correctly:

<b>LD 39</b>	Load program
<b>STAT RING 0</b>	Check the status of Ring 0 (HALF/HALF)
<b>STAT RING 1</b>	Check the status of Ring 1 (HALF/HALF)

- b.** If necessary, restore the Rings to Normal State:

<b>RSTR</b>	Restore both Rings to HALF state
-------------	----------------------------------

c. Check that the Rings operate correctly:

**STAT RING 0** Check the status of Ring 0 (HALF/HALF)

**STAT RING 1** Check the status of Ring 1 (HALF/HALF)

11 Check the status of the FIJI alarms:

**STAT ALRM** Query the alarm condition for all FIJI cards in  
all Network Groups

\*\*\*\* Exit program

12 Check applications.

13 Check dial tone.

## Switching call processing

### Procedure 23 Switching call processing

<b>LD 135</b>	Load program
<b>SCPU</b>	Switch call processing from Core/Net 1 to Core/Net 0



Core/Net 0 is now the active call processor.

### Procedure 24 Testing Core/Net 1

**From active Core/Net 0**, perform these tests on Core/Net 1:

- 1 Perform a redundancy sanity test:

<b>LD 135</b>	Load program
<b>STAT CPU</b>	Obtain status of CPU and memory
<b>TEST CPU</b>	Test the CPU

- 2 Test the System Utility card and the cCNI cards:

<b>LD 135</b>	Load program
<b>STAT SUTL</b>	Obtain the status of the System Utility card
<b>TEST SUTL</b>	Test the System Utility card
<b>STAT CNI c s</b>	Obtain status of cCNI cards (core, slot)
<b>TEST CNI c s</b>	Test cCNI (core, slot)

**3**    Test system redundancy and media devices:

<b>LD 137</b>	Load program
<b>TEST RDUN</b>	Test redundancy
<b>DATA RDUN</b>	Test database integrity
<b>STAT FMD</b>	Status of Fixed Media Device (FMD)
<b>STAT RMD</b>	Status of Removable Media Device (RMD)
<b>****</b>	Exit the program

**4**    Test that the system monitors are working:

<b>LD 37</b>	Load program
<b>STAT XSM</b>	Check the system monitors
<b>****</b>	Exit the program

**5**    Clear the display and minor alarms on both Cores:

<b>LD 135</b>	Load program
<b>CDSP</b>	Clear the displays on the cores
<b>CMAJ</b>	Clear major alarms
<b>CMIN ALL</b>	Clear minor alarms

**6** Test the clocks:

- a.**
- Verify that the clock controller is assigned to the
- active*
- Core.

<b>LD 60</b>	Load program
<b>SSCK <i>x</i></b>	Obtain the status of the clock controllers ( <i>x</i> is “0” or “1” for Clock 0 or Clock 1)
<b>SWCK</b>	Switch the Clock (if necessary)
<b>****</b>	Exit program

- b.**
- Verify that the Clock Controllers are switching correctly.

<b>SWCK</b>	Switch the Clock
	<b>Note:</b> You must wait a minimum of one minute for clocks to synchronize.
<b>SWCK</b>	Switch the Clock again

**7** Check dial tone.**8** Check applications.**9** Test the Fiber Rings:

- a.**
- Check that the Fiber Rings operate correctly:

<b>LD 39</b>	Load program
<b>STAT RING 0</b>	Check the status of Ring 0 (HALF/HALF)
<b>STAT RING 1</b>	Check the status of Ring 1 (HALF/HALF)

- b.**
- If necessary, restore the Rings to Normal State:

<b>RSTR</b>	Restore both Rings to HALF state
-------------	----------------------------------

- c.**
- Check that the Rings operate correctly:

<b>STAT RING 0</b>	Check the status of Ring 0 (HALF/HALF)
<b>STAT RING 1</b>	Check the status of Ring 1 (HALF/HALF)



- 10 Check the status of the FIJI alarms:

**STAT ALRM**      Query the alarm condition for all FIJI cards in  
all Network Groups

**\*\*\*\***              Exit program

- 11 Check applications.

- 12 Check dial tone.

---

**End of Procedure**

---

## Performing a customer backup data dump (upgraded release)

### Procedure 25

#### Performing a data dump to backup the customer database:

- 1 Log into the system.
- 2 Insert a CF card into the active Core/Net RMD slot to back up the database.
- 3 Load the Equipment Data Dump Program (LD 43). At the prompt, enter:

**LD 43**              Load program.

**.**                    EDD

- 4 When "EDD000" appears on the terminal, enter:

**EDD**              Begin the data dump.



### CAUTION

#### Loss of Data

If the data dump is not successful, do not continue; contact your technical support organization. A data dump problem must be corrected before proceeding.

- 5** When "DATADUMP COMPLETE" and "DATABASE BACKUP COMPLETE" appear on the terminal, enter:

\*\*\*\* Exit program

---

**End of Procedure**

---

The CS 1000M MG CP PII FNF upgrade to CS 1000M MG CP PIV with FNF is complete.



---

# Installing a Signaling Server

---

## Contents

This chapter contains the following topics:

Introduction . . . . .	116
Signaling Server task flow . . . . .	117
Readiness checklist . . . . .	119
Server card hardware installation . . . . .	121
Connections . . . . .	135
Upgrading and reconfiguring the software . . . . .	143

## Introduction

This chapter contains general instructions to install and connect Server card hardware. This chapter also contains general instructions to connect Commercial off-the-shelf (COTS) servers.

The Avaya Communication Server 1000M (Avaya CS 1000M) system supports the Common Processor Pentium Mobile (CP PM) card model NTDW66, the Common Processor Dual Core (CP DC) model NTDW54, and the Commercial off-the-shelf (COTS) servers.

A CP PM, CP DC or COTS server that you deploy with Signaling Server applications is referred to as a Signaling Server. A CP PM or COTS server that you deploy with SIP Line can be referred to as a SIP Line Gateway.

**IMPORTANT!**

Instructions to install an IBM X306m, IBM x3350, or HP DL320-G4, or Dell R300 COTS server are not included in this chapter. Detailed installation instructions are in the IBM xSeries 306m User Guide, IBM x3350 User Guide, HP ProLiant DL320 Generation 4 Server User Guide, or the Dell PowerEdge R300 User Guide shipped with the server.


## Signaling Server task flow

This section provides a high-level task flow for the installation or upgrade of an Avaya Communication Server 1000 (Avaya CS 1000) system. The task flow indicates the recommended sequence of events to follow when configuring a system and provides the document number that contains the detailed procedures required for the task.

For more information refer to the following documents, which are referenced in Figure 20 on [page 118](#):

- *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315)
- *Avaya Element Manager: System Administration* (NN43001-632)
- *Avaya Signaling Server IP Line Applications Fundamentals* (NN3001-125)

**Figure 20**  
**Signaling Server task flow**

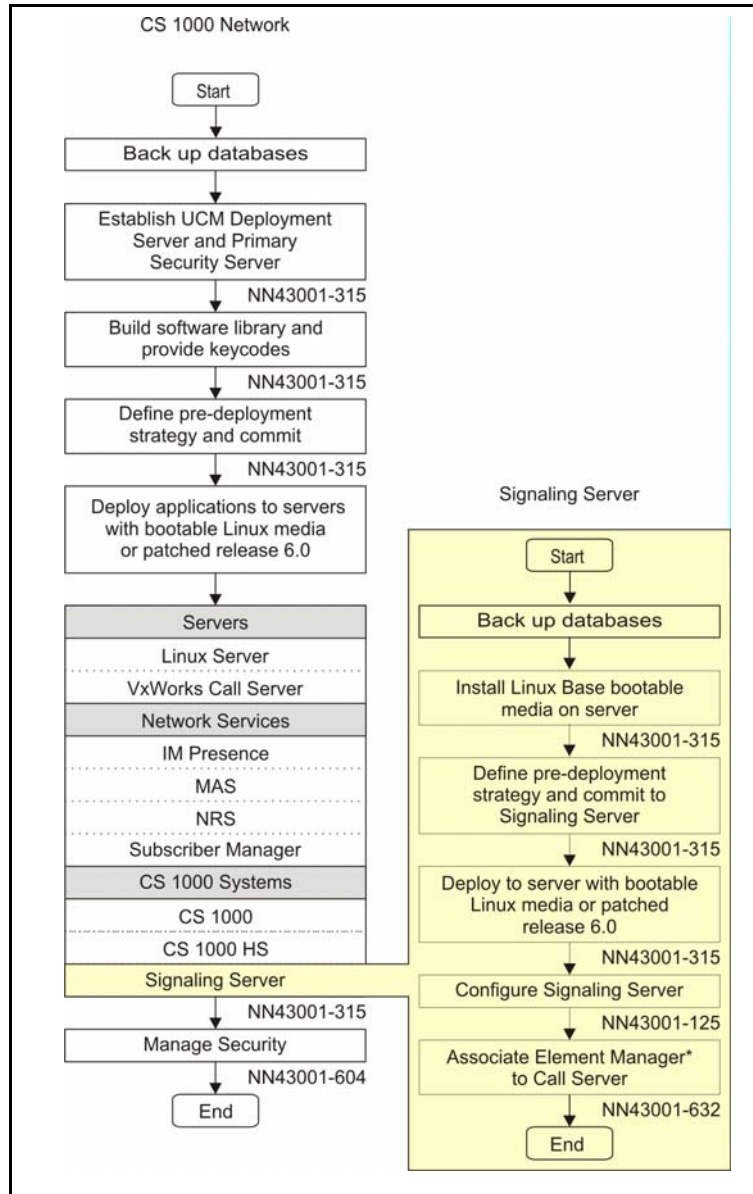

## Readiness checklist

Before installing a Signaling Server in a Communication Server 1000 system, complete the following checklist.



### **WARNING**

Do not modify or use a supplied AC-power cord if it is not the exact type required in the region where you install and use the Signaling Server. Be sure to replace the cord with the correct type.

**Table 6**  
**Readiness checklist (Part 1 of 2)**

<b>Have you:</b>	
Read all safety instructions in <i>Communication Server 1000M and Meridian 1 Large System Installation and Commissioning</i> (NN43021-310), as appropriate for your Communication Server 1000 system?	
<p>Do you have all equipment and peripherals?</p> <p><b>For COTS servers:</b></p> <ul style="list-style-type: none"> <li>• installation accessories for rack-mounting the server</li> <li>• AC-power cord</li> <li>• a DTE-DTE null modem cable (supplied)</li> </ul> <p>NTE90672: Linux Signaling Server software DVD for COTS servers</p> <p><b>For Server cards (NTDW66 CP PM, and NTDW54 CP DC)</b></p> <ul style="list-style-type: none"> <li>• (CP PM only) CP PM Signaling Server Linux Upgrade kit, which includes <ul style="list-style-type: none"> <li>— Linux OS preloaded hard drive kit (Optional, provided if required)</li> <li>— 2 GB Compact Flash (CF) with Linux software, 2 GB blank CF</li> <li>— 1 GB DDR SO-DIMM memory upgrade (Optional, provided if required)</li> </ul> </li> <li>• 2 port SDI Cable assembly kit</li> <li>• Large System Cabling kit</li> <li>• Large System Cabling</li> <li>• a DTE-DTE null modem cable (supplied)</li> </ul> <p><b>Note:</b> Save the packaging container and packing materials in case you must ship the product.</p>	
Confirmed the area meets all environmental requirements?	
Checked for all power requirements?	
Verified the CP PM meets all required specifications (2GB ram, 40GB hard drive, NTDW66AAE6 CP PM BIOS version 18 or higher)?	



**Table 6**  
**Readiness checklist (Part 2 of 2)**

Have you:	
Checked for correct grounding facilities?	
Obtained the following <ul style="list-style-type: none"> <li>• screwdrivers</li> <li>• an ECOS 1023 POW-R-MATE or similar type of multimeter</li> <li>• appropriate cable terminating tools</li> <li>• a computer (maintenance terminal) to connect directly to the Signaling Server, with <ul style="list-style-type: none"> <li>— teletype terminal (ANSI-W emulation, serial port, 9600 bps)</li> <li>— a Web browser for Element Manager (configure cache settings to check for new Web pages every time the browser is invoked, and to empty the cache when the browser is closed)</li> </ul> </li> </ul>	
Prepared the network data as suggested in <i>Converging the Data Network with VoIP</i> (NN43001-260) or <i>Communication Server 1000M and Meridian 1 Large System Planning and Engineering</i> (NN43021-220), as appropriate for your Communication Server 1000 system?	
Read all safety instructions in <i>Communication Server 1000M and Meridian 1 Large System Installation and Commissioning</i> (NN43021-310), as appropriate for your Communication Server 1000 system?	

## Server card hardware installation

This section contains instructions for installing a Server in a Communication Server 1000M system. The Communication Server 1000M system supports the NTDW66 CP PM card, NTDW54 CP DC card, and Comercial off-the-shelf (COTS) servers.

This section contains only general instructions to install the Server card in Communication Server 1000M systems. For more detailed installation

instructions, see *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).

**IMPORTANT!**

There are several switches on CP PM circuit cards. All switch settings must be factory defaults except for the switch labelled S5. Switch S5 must be in position 2 to support the internal hard drive used on the CP PM Signaling Server circuit card.

**Installation in a Communication Server 1000M system**

For CP PM cards, the first task that you must perform is to install the hard drive shipped with the server or Linux upgrade kit. For instructions, see *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).

The NTDW66 CP PM card and NTDW54 CP DC card are double wide faceplate cards designed for use in a CS 1000M Universal Equipment Module (UEM). You can insert the double wide CP PM or CP DC card into any slot of a CS 1000M UEM except slot 7. When upgrading from a CS 1000M system to CS 1000E, the slot next to slot 7 is occupied by the External Peripheral Equipment Controller (XPEC). This prevents the CP PM or CP DC double wide faceplate from seating into slot 7.

The next task that you must perform is to install ELAN and TLAN Ethernet ports on the back of the Communication Server 1000M UEM. These ports are used to connect your Server to the ELAN and TLAN Ethernet subnets of your Communication Server 1000M system.

Use the following procedure to install ELAN and TLAN Ethernet ports on the back of a Communication Server 1000M UEM.

**IMPORTANT!**

Installing ELAN and TLAN Ethernet ports on the back of a Communication Server 1000M Universal Equipment Module (UEM) disrupts service. You must turn off power to the shelf during this procedure.

**Procedure 26**

**Installing ELAN and TLAN Ethernet ports on the back of a Communication Server 1000M UEM**

- 1 Obtain the special cabling kit (NTDW69AAE5). The NTDW69AAE5 cabling kit includes the items shown in Figure 21.

**Figure 21**

**NTDW69AAE5 Cabling Kit contents**




The following is a list of items in the NTDW69AAE5 cabling kit:

- two RJ-45 CAT5 Ethernet patch cables
- two Ethernet port couplers
- one Ethernet port adapter plate
- two screws
- two nuts
- two washers
- two ferrite beads

**2** Insert an Ethernet port coupler into the adapter plate. See Figure 22.


**Figure 22**

**One Ethernet port coupler in adapter plate**

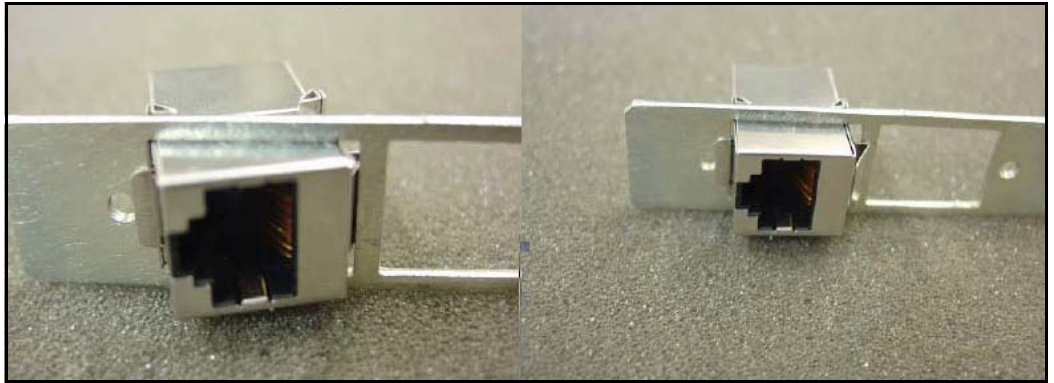


**3** Insert the other Ethernet port coupler into the adapter plate. See Figure 23 on page 124.

**Figure 23**  
**Two Ethernet port couplers in adapter plate**

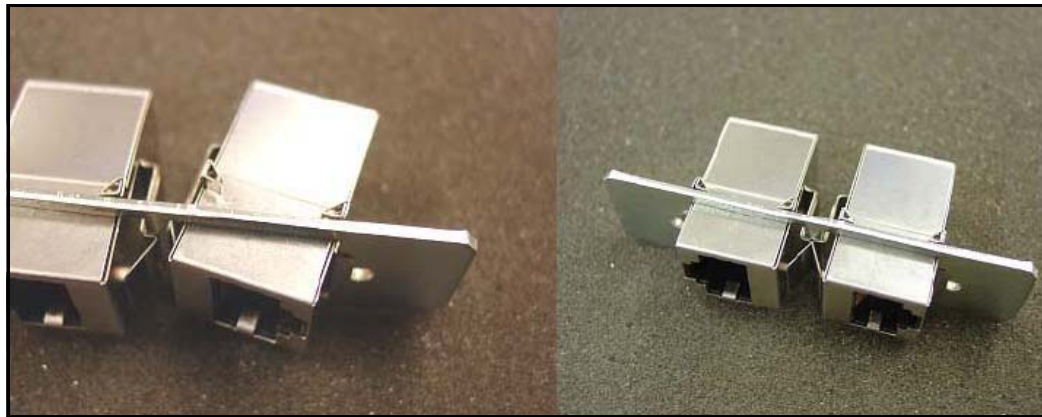


- 4    Loosely attach screws, washers, and nuts to the Ethernet port adapter plate. See Figure 24.

**Figure 24**  
**One Ethernet port coupler in adapter plate**

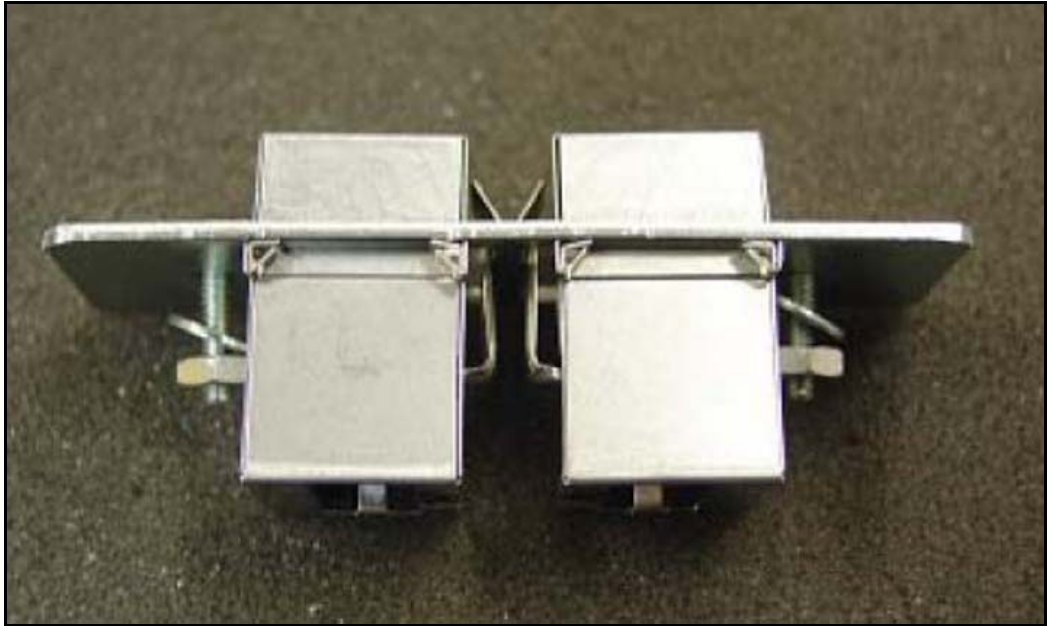

- 5** Switch off the UEM power supplies. See Figure 25.


**Figure 25**  
**Shut down UEM power supplies**

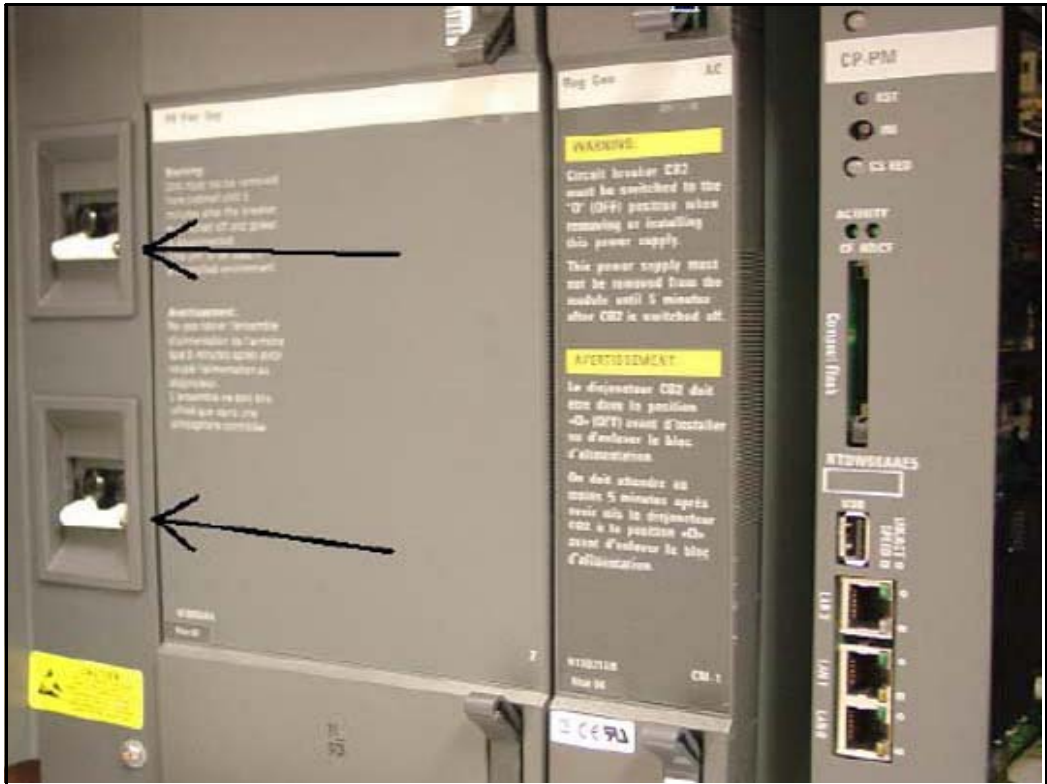

- 6 Select one of the J2-J5 knock-out plates on the back of the UEM. See Figure 26.

**Note:** For DC powered systems, turn off the breakers in the pedestal not on the shelf.


**Figure 26**  
**J2-J5 plates on back panel of UEM**

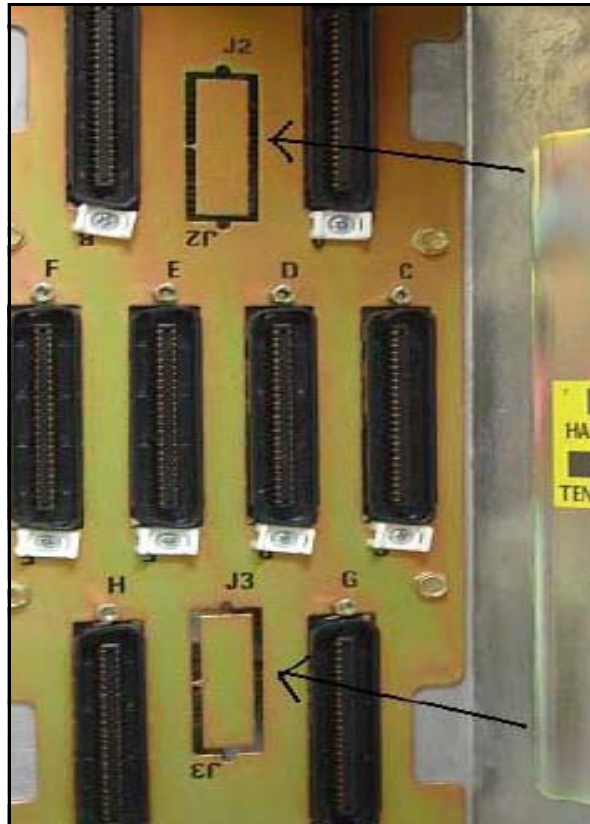

- 7 Knock out the metal plate from the selected J2-J5 location to provide a hole through which the Ethernet patch cables are routed and to which the Ethernet port adapter plate is attached. See Figure 27.




**Figure 27**  
**Selected J2-J5 plate on back panel of UEM**

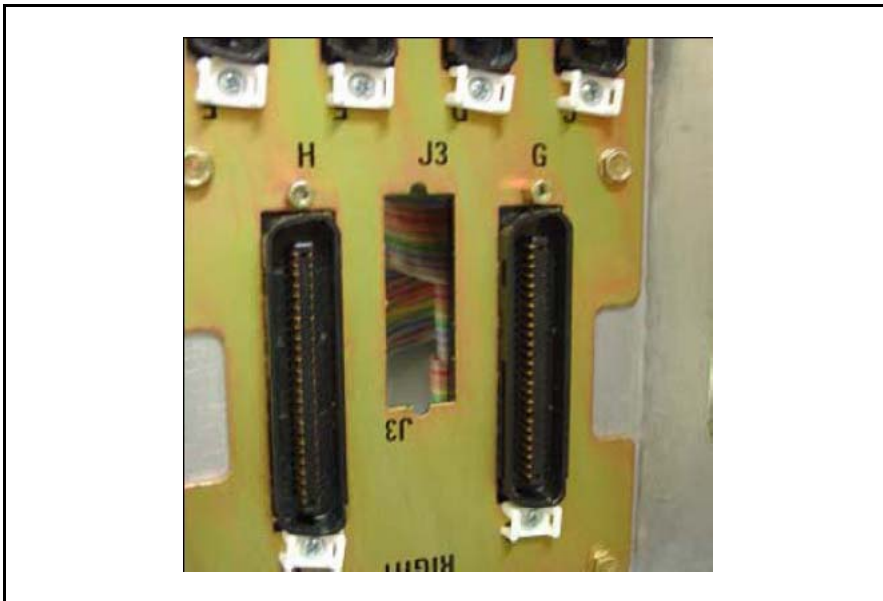

- 8**    Establish an ELAN port on the back panel of the UEM.
  - a.**    Insert the end of one of the RJ-45 CAT5 Ethernet patch cables (supplied) into the ELAN network interface (ELAN port) on the Server faceplate.
  - b.**    Route the Ethernet patch cable through the hole you made in the back panel of the UEM.
  - c.**    Plug the other end of the Ethernet patch cable into one of the Ethernet port couplers mounted in the Ethernet port adapter plate.
  - d.**    Label the Ethernet port coupler as ELAN.

See Figure 28 and Figure 29.

**Figure 28**  
**ELAN connection on CP PM faceplate**

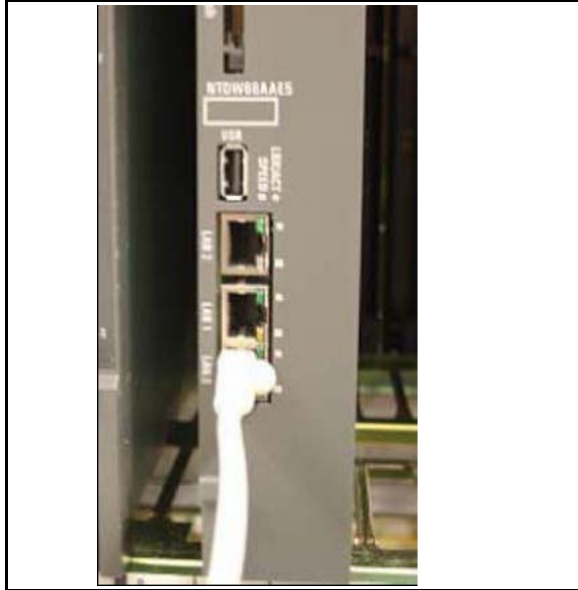

**Figure 29**  
**ELAN connection on Ethernet port coupler**




- 9**    Connect the server to the TLAN subnet.
  - a.**    Insert one end of the remaining RJ-45 CAT5 Ethernet patch cable (supplied) into the TLAN network interface (TLAN port) on the Server faceplate.
  - b.**    Route the Ethernet patch cable through the hole you made in the back panel of the UEM.
  - c.**    Plug the other end of the Ethernet patch cable into the remaining Ethernet port coupler mounted in the Ethernet port adapter plate.
  - d.**    Label the Ethernet port coupler as TLAN.

See Figure 30 and Figure 31.

**Figure 30**  
**TLAN connection on CP PM faceplate**



**Figure 31**  
**TLAN connection on Ethernet port coupler**

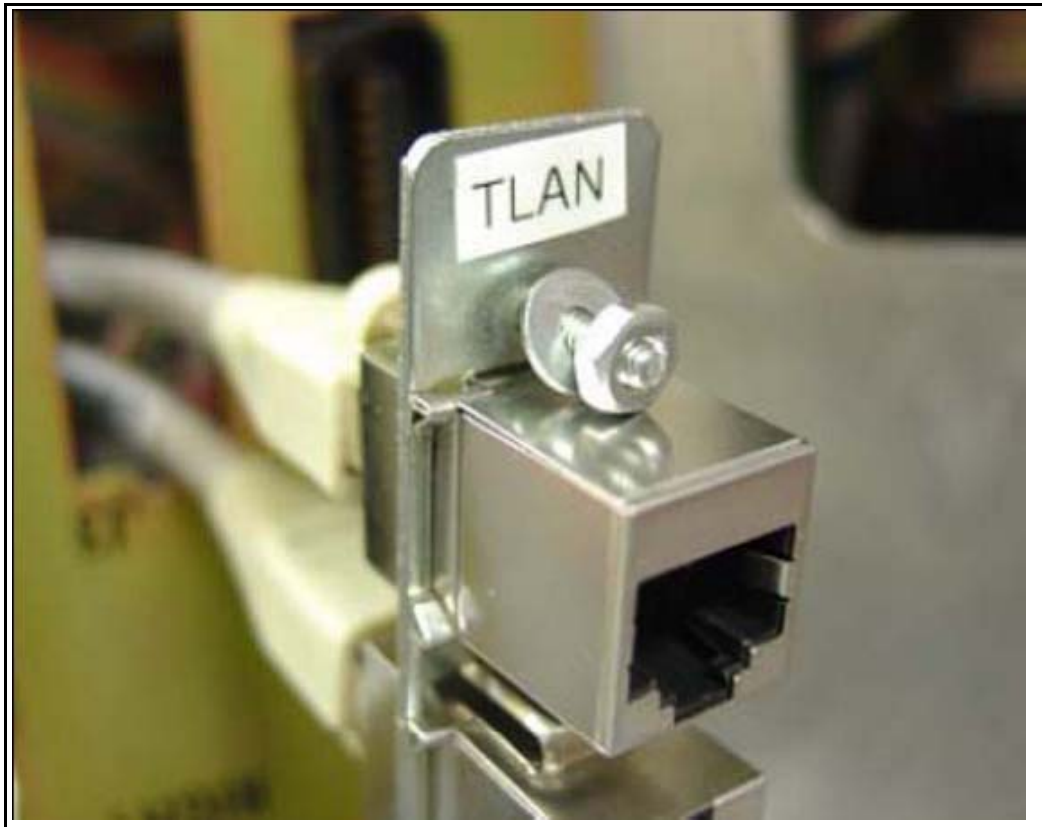

- 10** Fit the Ethernet port adapter plate into the hole on the back of the UEM and tighten the screws. See Figure 32.

**Figure 32**  
**Installed Ethernet port adapter plate**



**11** Attach the ferrite beads to the Ethernet patch cables. See Figure 33.

**Figure 33**  
**Attached Ethernet patch cable ferrite beads**



---

End of Procedure

---

## Connections

This section contains information about server connections.

### Connection checklist

**WARNING**

Do not modify or use a supplied AC power cord if it is not the correct type required for the host region.

**IMPORTANT!**

Server cards are powered through the backplane of the Media Gateway, Universal Equipment Module, or Media Gateway cabinet into which they are installed and do not require a power cord.

Before connecting a Server, ensure that you have the following materials on-hand.

**Table 7**  
**Connections checklist**

Do you have:	
A serial cable (DTE-DTE null modem cable) to connect the server to a maintenance terminal? The IBM x3350 requires a NTRX26NPE6 9 pin female to 9 pin female null modem cable.	
An NTAK19EC cable for each CP PM or CP DC card? This cable adapts the 50-pin MDF connector on the back of the shelf of the Media Gateway, Universal Equipment Module, or 11C cabinet to a 25-pin DB connector.	
Shielded CAT5 cables (or better) to connect the server to the ELAN and TLAN subnets?	



## Connecting a Signaling Server

This section contains instructions for connecting a Server to the ELAN and TLAN subnet of a CS 1000M system. It also contains instructions for connecting a maintenance terminal to the Server.

A Server card is inserted into a slot of a Universal Equipment Module (UEM). UEMs do not have built-in ELAN and TLAN Ethernet ports. You must install Ethernet ports on the back of the UEM to enable the Server to connect to the ELAN and TLAN subnets of your Communication Server 1000 system (see Procedure 26: "Installing ELAN and TLAN Ethernet ports on the back of a Communication Server 1000M UEM" on [page 123](#).)

Perform Procedure 27 to connect a Server card to the ELAN and TLAN subnets of a Communication Server 1000M system.

### **IMPORTANT!**

Connecting a Signaling Server to the ELAN and TLAN subnets of a CS 1000M system causes a service disruption.

#### **Procedure 27**

##### **Connecting a Server Card to the ELAN and TLAN subnets of a Communication Server 1000M system**

- 1    Insert the end of an RJ-45 CAT5 Ethernet cable (not supplied) into the ELAN network interface port (ELAN port) on the back of the Communication Server 1000M UEM. (You installed this ELAN port at the back of the UEM when you installed the Signaling Server in the UEM. For more information, see Procedure 26: "Installing ELAN and TLAN Ethernet ports on the back of a Communication Server 1000M UEM" on [page 123](#).)
- 2    Insert the other end of the RJ-45 CAT5 Ethernet cable into an Ethernet port on the ELAN Ethernet switch.
- 3    Insert the end of another RJ-45 CAT5 Ethernet cable (not supplied) into the TLAN network interface port (TLAN port) on the back of the Communication Server 1000M UEM. (You installed this TLAN port at the back of the UEM when you installed the Signaling Server in the UEM. For more information, see Procedure 26: "Installing ELAN and TLAN Ethernet ports on the back of a Communication Server 1000M UEM" on [page 123](#).)

- 4 Insert the other end of the RJ-45 CAT5 Ethernet cable into an Ethernet port on the TLAN Ethernet switch.

---

**End of Procedure**

---

**Verify or change the baud rate**

To verify or change the baud rate on an Avaya CP PM Signaling Server, see *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).

## Connecting an IBM COTS server

In geographic regions that are susceptible to electrical storms, Avaya recommends that you plug the IBM COTS server into an AC surge suppressor.

Figure 34 shows the rear view of the IBM X306m server.

**Figure 34**  
**IBM X306m (rear view)**


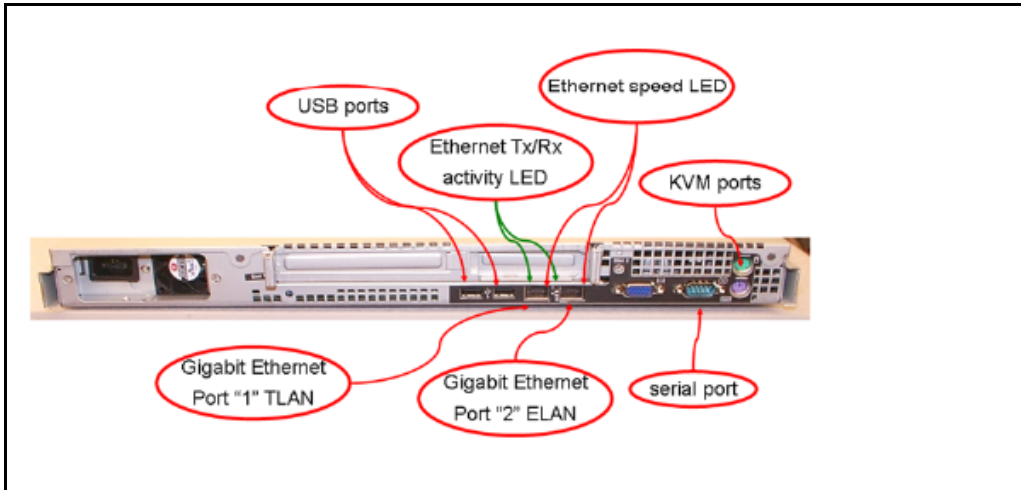


Figure 35 shows the rear view of the IBM x3350 server.

**Figure 35**  
**IBM x3350 (rear view)**

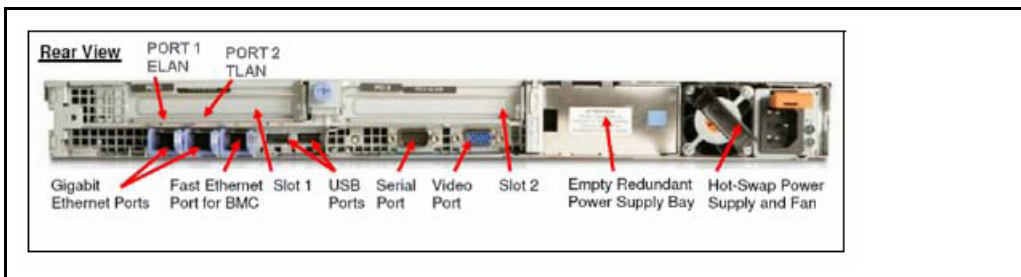

**Note:** When you perform Procedure 28, “Connecting an IBM COTS server,” on [page 139](#), see Figure 34 or Figure 35.

### **Procedure 28**

#### **Connecting an IBM COTS server**

- 1 Connect the IBM server to the TLAN subnet. Insert the RJ-45 CAT5 (or better) cable into the TLAN Ethernet port on the back of the server. Insert the other end of the cable into the TLAN subnet of the Layer 2 switch.
- 2 Connect the IBM server to the ELAN subnet. Insert the RJ-45 CAT5 (or better) cable into the ELAN Ethernet port on the back of the server. Insert the other end of the cable into the ELAN subnet of the Layer 2 switch.
- 3 Connect a DTE–DTE null modem serial cable from the serial port on the back of the server to the serial port on a maintenance terminal. The IBM x3350 requires a NTRX26NPE6 9 pin female to 9 pin female null modem cable.
- 4 Connect the IBM server power cord.
  - a. Check that the power cord is the type required in the region where you use the server. Do not modify or use the supplied AC power cord if it is not the correct type.
  - b. Attach the female end of the power cord to the mating AC power receptacle on the server back panel. Plug the male end of the AC power cord into the AC power source (wall outlet).
- 5 Set the baud rate for the serial port on the server to 9600 b/ps. See *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).

**Note:** The IBM X306m Signaling Server ships with the serial port configured to 9600 b/ps.

- 6 Configure the connected maintenance terminal. See *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).

- 7 Press the Power switch.

**Note:** For more information about operating information, see the IBM User Guide for your IBM server.

---

**End of Procedure**


---

## Connecting an HP COTS server

In geographic regions that are susceptible to electrical storms, Avaya recommends that you plug the HP server into an AC surge suppressor.

Figure 36 shows the rear view of the HP DL320-G4 server.

**Figure 36**  
**HP DL320-G4 (rear view)**

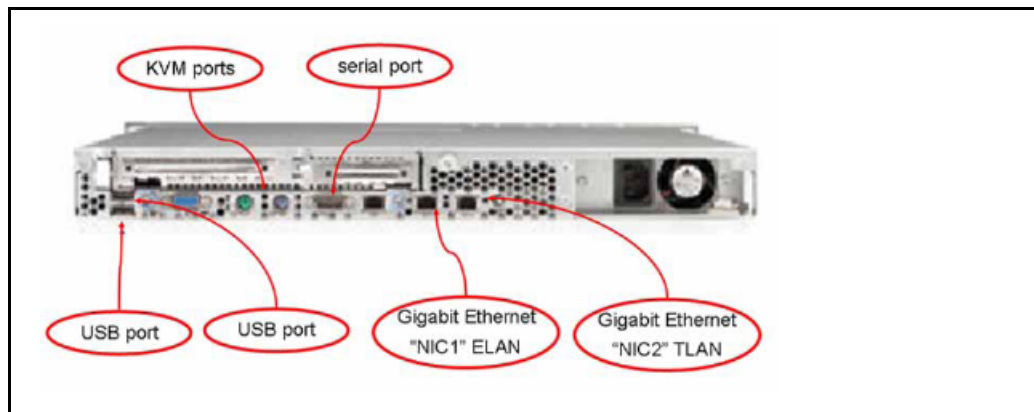

**Note:** When you perform Procedure 29, “Connecting an HP COTS server,” on [page 140](#), see Figure 36.

### **Procedure 29** **Connecting an HP COTS server**

- 1 Connect the HP server to the TLAN subnet. Insert the RJ-45 CAT5 (or better) cable into the TLAN Ethernet port on the back of the server. Insert the other end of the cable into the TLAN subnet of the Layer 2 switch.
- 2 Connect the HP server to the ELAN subnet. Insert the RJ-45 CAT5 (or better) cable into the ELAN Ethernet port on the back of the server. Insert the other end of the cable into the ELAN subnet of the Layer 2 switch.
- 3 Connect a DTE–DTE null modem serial cable from the Serial Port on the back of the server to a maintenance terminal.
- 4 Connect the HP server power cord.

- a. Check that the power cord is the type required in the region where you use the server. Do not modify or use the supplied AC power cord if it is not the correct type.
  - b. Attach the female end of the power cord to the mating AC power receptacle on the right-hand side of the server back panel. Plug the male end of the AC power cord into the AC power source (wall outlet).
- 5 Configure the COM1 serial port as the communication port for the connected maintenance terminal. Configure the COM 1 baud rate for the serial port on the server to 9600 b/ps. See *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).
- 6 Configure the connected maintenance terminal. See *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).
- 7 Press the Power switch.

---

**End of Procedure**


---

## Connecting a Dell COTS server

In geographic regions that are susceptible to electrical storms, Avaya recommends that you plug the Dell server into an AC surge suppressor.

Figure 37 shows the rear view of the Dell R300 server.

**Figure 37**  
**Dell R300 server (rear view)**

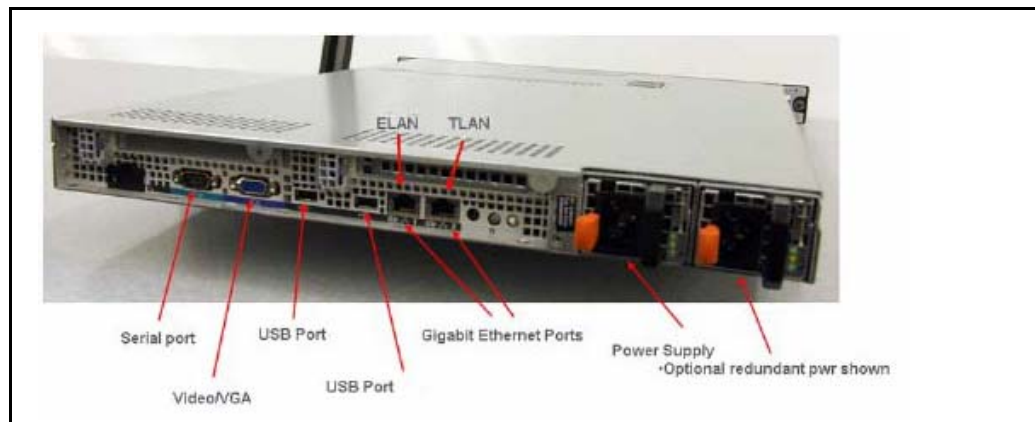

**Note:** When you perform Procedure 30, “Connecting a Dell COTS server,” on [page 142](#), see Figure 37.

### **Procedure 30** **Connecting a Dell COTS server**

- 1 Connect the Dell server to the TLAN subnet. Insert the RJ-45 CAT5 (or better) cable into the TLAN Ethernet port on the back of the server. Insert the other end of the cable into the TLAN subnet of the Layer 2 switch.
- 2 Connect the Dell server to the ELAN subnet. Insert the RJ-45 CAT5 (or better) cable into the ELAN Ethernet port on the back of the server. Insert the other end of the cable into the ELAN subnet of the Layer 2 switch.
- 3 Connect a DTE–DTE null modem serial cable from the Serial Port on the back of the server to a maintenance terminal.
- 4 Connect the Dell server power cord.

- a. Check that the power cord is the type required in the region where you use the server. Do not modify or use the supplied AC power cord if it is not the correct type.
  - b. Attach the female end of the power cord to the mating AC power receptacle on the right-hand side of the server back panel. Plug the male end of the AC power cord into the AC power source (wall outlet).
- 5 Configure the COM1 serial port as the communication port for the connected maintenance terminal. Configure the COM 1 baud rate for the serial port on the server to 9600 b/ps. See *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).
- 6 Configure the connected maintenance terminal. See *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).
- 7 Press the Power switch.

---

**End of Procedure**

---

## Maintenance terminal configuration parameters

To configure Signaling Server maintenance terminal configuration parameters, see the Maintenance chapter of *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).

## IP subnet configuration

CS 1000 Release 7.6 Signaling Servers support IPv6 and IPv4 addresses. If the Signaling Server and Call Server reside in different IP subnets, you must manually add a route from Base Manager in order for Element Manager to communicate and interact with the Call Server. For more information, see *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).

## Upgrading and reconfiguring the software

This section contains information and references for upgrading the Signaling Server software from a previous release to CS 1000 Release 7.5. Signaling Server applications in CS 1000 Release 7.5 require Linux. You must install



CS 1000 Linux Base on your CP PM, CP DC or COTS server before you can install any Signaling Server applications.

CS 1000 Release 7.5 supports the following Signaling Server hardware:

- CP PM server
- CP DC server
- IBM X306m server
- IBM x3350 server
- HP DL320-G4 server
- Dell R300 server



**IMPORTANT!**

Avaya CS 1000 Release 7.5 does not support the ISP1100 Signaling Server. You must replace the ISP1100 with a CP PM, CP DC, or COTS Signaling Server.

If you are upgrading from a Vxworks Signaling Server, Avaya recommends that you backup your IP Phone database and Network Routing Service (NRS) database on your current software release before upgrading to CS 1000 Linux Base and installing applications. You can restore your IP Phone database and NRS backups after you complete the Signaling Server upgrade.

CS 1000 Release 7.5 requires a Signaling Server to have at least 2 GB of RAM memory, and at least 40 GB of hard drive capacity. You must upgrade Signaling Servers with less than 2GB of RAM before installing CS 1000 Release 7.5 Linux Base and Signaling Server software. For detailed instructions on performing this memory upgrade, see *Avaya Circuit Card: Description and Installation* (NN43001-311).

You can upgrade a CP PM Signaling Server to support the CS 1000 Linux Base and applications for Communication Server 1000 with a CP PM Signaling Server Linux upgrade kit. The upgrade kit includes the following components.

- Linux OS preloaded hard drive kit (optional, provided if required)

- 2 GB Compact Flash (CF) with Linux software, 2 GB blank CF
- 1 GB DDR SO-DIMM memory upgrade (optional, provided if required)

## Overview

An upgrade of the Signaling Server software consists of the following steps:

- Back up application databases using Element Manager
- Install CS 1000 Linux Base and configure parameters
- Use Centralized Deployment manager to deploy and install Signaling Server applications
- Configure the system or import backup node files in Element Manager
- Use Element Manager to restore backups of application databases

Avaya recommends that you back up the application databases before performing the upgrade. The application databases consist of the IP Phone database and the NRS database.

If you do not know whether the Signaling Server being upgraded has an NRS, use Procedure 31, “Verifying the presence of an NRS,” on [page 146](#) to make this determination.

If you have an NRS database on the Signaling Server and want to back it up before performing the upgrade, you must use the backup tool in NRS Manager. After the Signaling Server is upgraded, use NRS Manager to restore the NRS database (from your local PC) and activate it for use by the NRS.

For instructions on backing up and restoring an NRS database, see *Avaya Network Routing Service Fundamentals* (NN43001-130).

For instructions on backing up and restoring the IP Phone database, see *Avaya Signaling Server IP Line Applications Fundamentals* (NN3001-125).

### Procedure 31

#### Verifying the presence of an NRS


- 1 Open the supported Web browser.
- 2 Enter the ELAN or TLAN network interface IP Address of the primary Signaling Server as the URL.

**Note:** Note: Do not assign the same IP address for the Node ID and the TLAN network interface IP address. This must be verified manually. The Node IP address must be on the same subnet as the TLAN network interface IP addresses of the Media Cards. In addition, the TLAN and ELAN network interfaces of the Media Card must reside on separate logical subnets.

If additional configuration parameters were entered during installation, the node IP address can also be used as the URL.

The Element Manager logon web page appears.

**Figure 38**  
**Element Manager logon page**

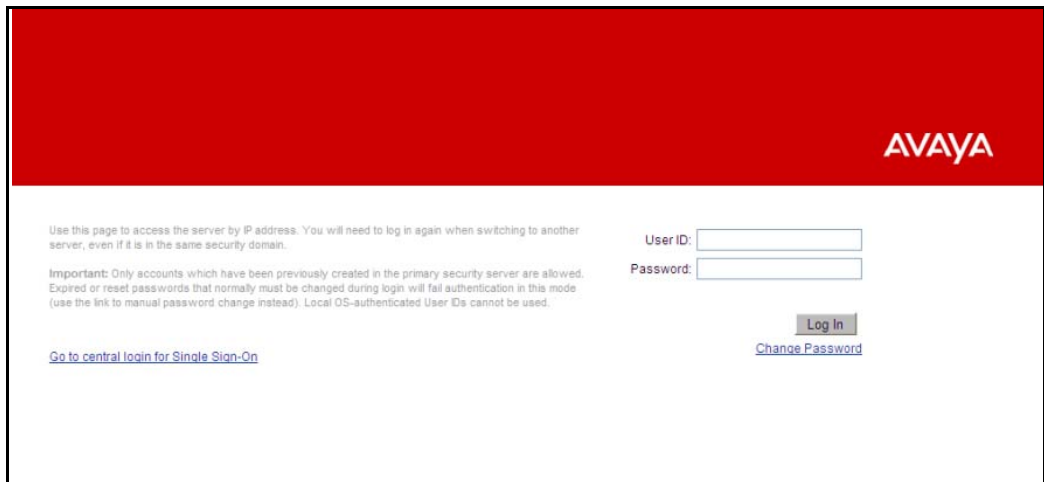

Use this page to access the server by IP address. You will need to log in again when switching to another server, even if it is in the same security domain.

Important: Only accounts which have been previously created in the primary security server are allowed. Expired or reset passwords that normally must be changed during login will fail authentication in this mode (use the link to manual password change instead). Local OS-authenticated User IDs cannot be used.

[Go to central login for Single Sign-On](#)

User ID:

Password:

[Change Password](#)


Initially, you can be prompted to enter the Call Server IP address, because the Call Server is used for web logon authorization. The Call Server IP address is a requirement, because unless you entered additional configuration parameters during the Signaling Server installation, the node configuration data file containing the Call Server IP address does not yet exist.

- 3 Enter a Level 1 or Level 2 user ID and password. If configured, you can also use a Limited Access Password (LAPW) user ID and password.

If this is the first time the Call Server is accessed, the default Level 1 or Level 2 user ID and password must be used.

If the logon is successful, the Element Manager "Home - System Overview" screen appears (see Figure 39 on [page 147](#)).

**Figure 39**  
**Element manager: Home - System Overview**

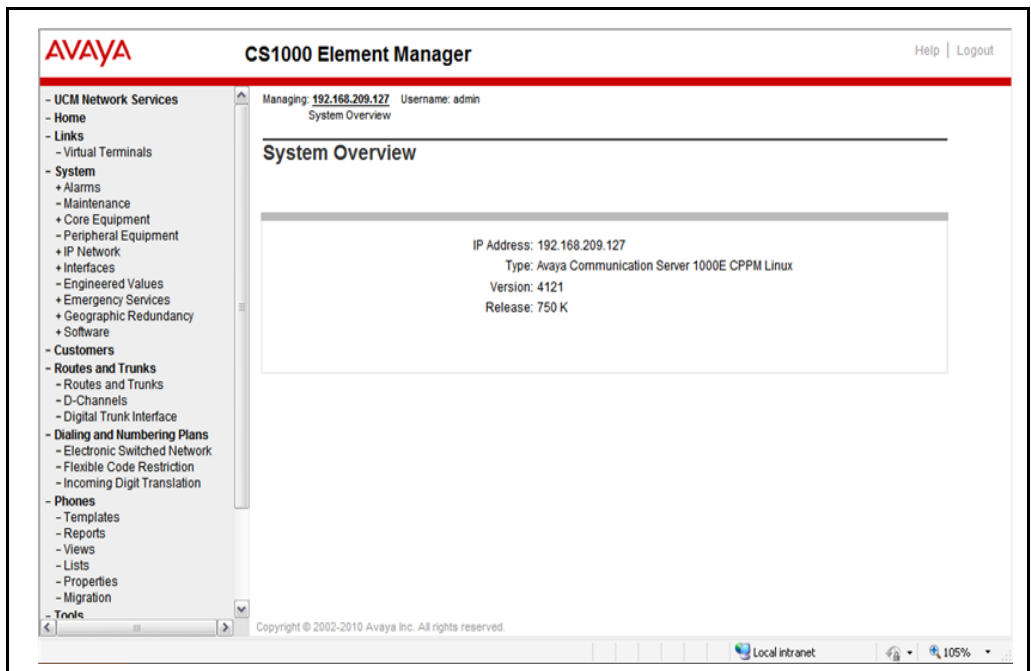

This screen identifies the components of your CS 1000 system.

- 4 Click the "+" symbol in front of the Signaling Server component.

The Signaling Server component expands to display the properties of the Signaling Server (see Figure 40 on [page 148](#)).

**Figure 40**  
**Signaling Server properties**

<b>- Signaling Server</b>	
<b>Host Name</b>	CS1000E_PIV
<b>Type</b>	ISP1100
<b>H323 ID</b>	CS1000E_PIV
<b>Software version</b>	sse-4.91.06
<b>Role</b>	Leader
<b>Element Manager</b>	Equipped
<b>Line TPS (UNISTim)</b>	Equipped
<b>IP Peer Gateway (Virtual Trunk TPS)</b>	Equipped
<b>SIP Proxy/Redirect Server</b>	Enabled
<b>SIP Gateway</b>	Enabled
<b>Gatekeeper configuration</b>	Primary

- 5 View the contents of the "Gatekeeper configuration" property.

If the Gatekeeper configuration property indicates Primary (as is the case here), Alternate or Failsafe, the Signaling Server hosts an NRS. If the property indicates nothing, the Signaling Server does not host an NRS.

---

**End of Procedure**

---

## Before you begin

Before upgrading the software, you must do the following:

- Connect the Signaling Server. For details, see “Connections” on page 135 or refer to *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).
- Take a precautionary backup of the IP Phones application database.
- Take a precautionary backup of the NRS database.

- Obtain the CS 1000 Release 7.5 version of the Signaling Server Software Install media. For details, see *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).
- Ensure that there is 2 GB of RAM and at least 40 GB of hard drive capacity on your CP PM or COTS Signaling Server.

## Upgrade the CP PM BIOS

The NTDW66CAE6 CP PM card (CP PM version 2) does not require a BIOS upgrade. The CP PM version 2 uses an updated design, BIOS, and boot manager. Older NTDW66 CP PM cards (CP PM version 1) might require a BIOS upgrade to support Linux.

The Communication Server 1000 Linux Platform Base installer requires that a CP PM version 1 card runs BIOS version 18 or higher. If the installer detects a lower version on the CP PM card it automatically loads software for you to upgrade the CP PM BIOS. Perform the steps in Procedure 32 to upgrade the CP PM BIOS to version 18.

For information about manually upgrading the CP PM BIOS with VxWorks software, see *Avaya Communications Server 1000E Maintenance* (NN43041-700).

### Procedure 32

#### Upgrading the CP PM BIOS with the CS 1000 Linux Base installer

- 1 Connect to serial port 1 on the CP PM.
- 2 Insert the CS 1000 Linux Base installation CF card into the faceplate CF slot.
- 3 Power on the system.
- 4 Once the initial boot and memory check completes for a CP PM version 1 card, Figure 41 appears. Press the **F** key to boot from the CS 1000 Linux Base installation faceplate CF card.

**Note:** For CP PM version 2 cards, press the **F** key to enter the boot menu, select Faceplate RMD, and press **Enter** to boot from the faceplate CF card.



**Figure 42**  
**CP PM BIOS automatic upgrade**

```
#####
#
#   CP-PM BIOS version is less than 18. BIOS upgrade is required.   #
#                                                                    #
# To complete the upgrade, BIOS settings must be changed to defaults. #
#   Please refer to the documentation for more information.         #
#                                                                    #
#####

Do you want to upgrade BIOS ROM up to the version 18? (yes/no): yes

BIOS ROM upgrade. Please wait...


BIOS ROM upgrade is finished.

Machine will be rebooted right now... Press Enter key to continue
```

- 7 Verify that the BIOS upgrade is finished. Press **Enter** to reboot.
- 8 During the reboot memory check, press **Ctrl c** to access the CP PM BIOS setup menu.  
**Note:** If you miss the timing to press **Ctrl c** you must reboot the system and try again. The Linux Platform Base installation software will display a warning if you do not reset the CP PM BIOS to factory defaults.
- 9 Figure 43 appears. Select **Reset CMOS to factory defaults** from the menu.




**Figure 43**  
**CP PM BIOS setup**

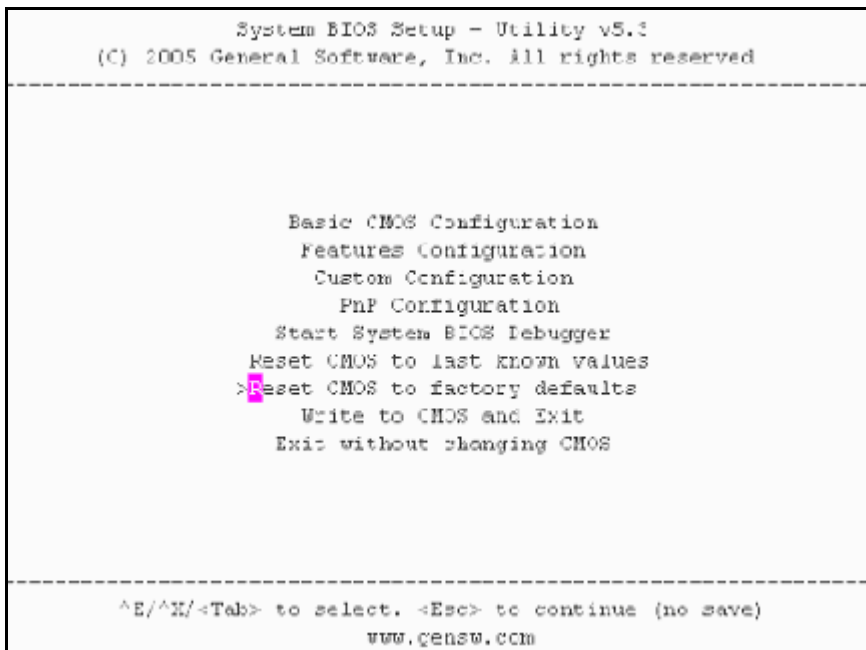

**10** Figure 44 appears. Press **y** to reset CMOS to factory defaults.

**Figure 44**  
**CP PM BIOS reset**

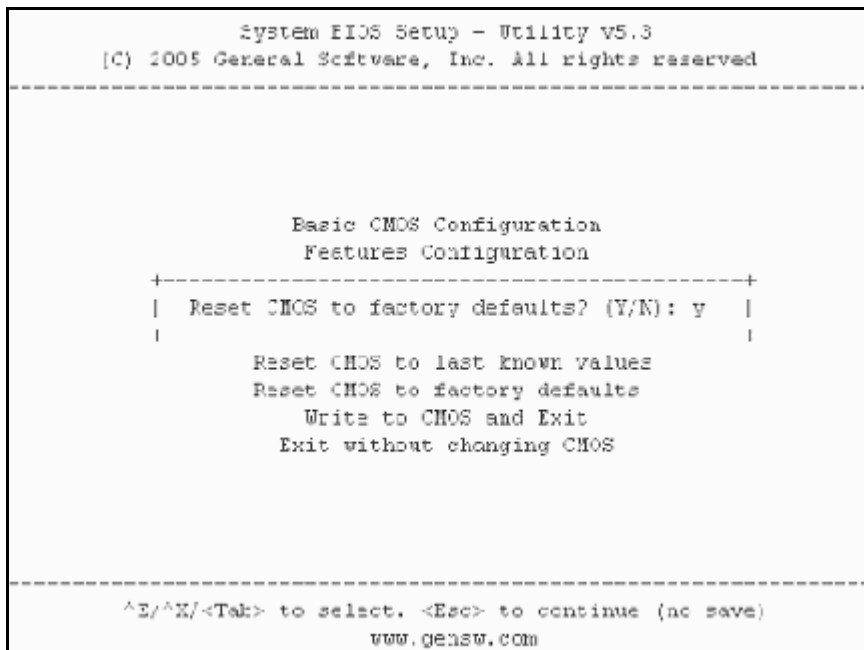

- 11 The system reboots. After the initial boot, Figure 41 appears and the new BIOS version displays. Verify the BIOS version is 18. You can now press the **F** key to boot from the faceplate CF card and proceed with the Linux Platform Base software installation.

**End of Procedure**

## Installing the CS 1000 Linux Base

You must install CS 1000 Linux Base if your Signaling Server is not running the latest CS 1000 Linux Base software release. The CP PM Linux upgrade kit contains a hard drive with CS 1000 Linux Base preloaded. You can install CS 1000 Linux Base from the command line interface (CLI) using a bootable CF card on CP PM, and using a bootable optical disk on COTS.

Configure the ELAN, TLAN, IP address, Gateway, subnet masks, date, and time settings during the CS 1000 Linux Base installation.

For information about installing or upgrading CS 1000 Linux Base, see *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).

## Installing Linux applications

Avaya CS 1000 Release 7.5 Signaling Server and SIP line software are Linux applications. Linux applications install on CS 1000 Linux Base and interact with the CS 1000 Linux Base application framework. You can deploy and install Linux applications with the CS 1000 Linux Base Centralized Deployment Manager. You can configure and deploy SIP Line with Element Manager (EM).

For information about Linux applications and Centralized Deployment Manager, see *Avaya Signaling Server IP Line Applications Fundamentals* (NN3001-125) and *Avaya Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).

For information about Element Manager, see *Avaya Element Manager: System Administration* (NN43001-632).

## Joining the UCM security domain

The UCM Primary Security Server acts as the RADIUS server that CS 1000 devices use to obtain authentication and access control parameters for CLI access. The UCM Primary Security Server sends RADIUS related parameters to CS 1000 devices using the SSH protocol.

When a device joins the UCM security domain, a mutually-trusted SSH channel is created. You must manually confirm the fingerprint of the public key before the UCM Primary Security Server RSA public key is added to the authorized key file. This verification prevents third-party intercepts.

When a mutually-trusted SSH tunnel establishes a connection to a CS 1000 device, the UCM Primary Security Server can send SSH remote commands to the device using RSA public key-based authentication.

For more information about joining the UCM security domain, see *Avaya Security Management* (NN43001-604).



---

# Appendix A: Upgrade checklists

---

## Contents

This chapter contains the following topics:

Introduction . . . . .	158
Site details . . . . .	159
Upgrade details . . . . .	159
Preupgrade checklists . . . . .	160
Preconversion steps . . . . .	163
Postconversion checks . . . . .	165
Quick reference . . . . .	165
Group/Loop/PS/FIJI/3PE Switch Settings . . . . .	167

## Introduction

The following section provides Large System upgrade checklists.

### Technical Support

Avaya can provide an Installation and Upgrade Support team to assist with PBX upgrades on a scheduled bases. This service is billable and a purchase order is required. Please refer to current price book for rates.

***Note:*** This service requires that a service request be opened in advance of the upgrade.

## Site details

**Table 8**  
**Site Details**

Customer Name	
Tape ID (LD 22)	
Modem Number (Core)	
Switch Room Telephone	
Baud Rate	
Modem Password	
PBX Password	
System Type	
Software Generic	

## Upgrade details

**Table 9**  
**Upgrade details**

Current Software - Generic	
Target Software - Generic	
Hardware being added	
Feature Upgrade	
License Upgrade	

## Preupgrade checklists

### Software Upgrade

#### Software audit

**Table 10**  
**Software audit**

<b>Software Audit</b>		
Perform the software audit prior to the scheduled upgrade.		
Take corrective action if answer is no		
	Yes	No
Software CD Ready		
Keycode Disk Ready		
Install Disk Ready		
DEP Patch Disk Ready		
Review Keycode Data Sheet - (SDID,PKGS,License,TID)		
Review Site Specific Patches - (Non MDCS)		
Read GRB for target Release – (Verify Memory Requirements)		



## License Upgrade

**Table 11**  
**Keycode audit**

<b>Keycode Audit</b>		
Perform the keycode Audit prior to the scheduled upgrade.		
Take corrective action if answer is no		
	Yes	No
Keycode Disk Ready		
Keycode Data Sheet Ready		
SDID Matches System		
TID Matches System		
Perform a KDIFF in LD 143 to compare keycodes		

## Conversion Required

**Table 12**  
**Conversion Procedures**

<b>Conversion Procedures</b>	
Upgrades between different machine types require some type of conversion.	
If the disk media is changing the database must be physically transferred	
between storage devices. Please select source and target media.	

**Table 13**  
**Typical Storage Media Changes Between machine Types (Part 1 of 2)**

<b>Typical Storage Media Changes Between machine Types</b>		
Source	Target	Procedure Required
CMDU	IODUC	4M - 2M media transfer

**Table 13****Typical Storage Media Changes Between machine Types (Part 2 of 2)**

IODUC	MMDU	Disk to new Drive both use 2M Floppy Drives
MMDU	MMDU	Disk to new Drive

## Hardware Upgrade

### Hardware audit

**Table 14**  
**Hardware audit**

Hardware Audit		
Perform the Hardware Audit prior to the scheduled upgrade.		
	Yes	No
Verify Shipping List - Complete and Accurate		
Audit Site for new hardware locations		
Pre Run Cables if possible		
Review All switch settings for new cards		
Read all applicable document Procedures completely		

## Preconversion steps

**Table 15**  
**Preconversion steps (Part 1 of 2)**

Pre Conversion Steps
A capture file should be made of the following information using a PC or Printer.
Perform an overall system check:
LD 135 SCPU (ensure that the system is redundant)
LD 137 STAT/TEST CMDU
LD 96 STAT DCH
LD 48 STAT AML
LD 32 STAT
LD 60 STAT

**Table 15**  
**Preconversion steps (Part 2 of 2)**

LD 30 LDIS (Verify what Is disabled if any)
Obtain Software Information from LD 22
ISSP - Patches in service - Future Reference if required
LD 143 - MDP ISSP -Prints all inservice patches and patch handle numbers (includes all DepList patches)
TID/SLT - License Parameters - To compare with converted database
LD 21 - PRT CFN
LD 97 - PRT SUPL/XPEC
Run a Template Audit
LD 1 - Auto Run
Perform a Datadump
Backup at least two copies of the current database, retain the copies.
Print History File or System Event Log
LD 22 - Print AHST - Capture Systems Events to compare will new software if required
LD 117 - PRT SEL 500 - Same as above

## Postconversion checks

**Table 16**  
**Postconversion checks**

Post Conversion Checks
Perform these checks after a successful INI.
Test for dial tone
Stat D Channels for proper operation
Ensure that all XPEC's are in service via visual inspection
Ensure that all AUX applications are working
LD 30 LDIS (Verify that output is the same prior to upgrade)

## Quick reference

### IGS Cabling Chart - MultiGroup PBX - Opt 81/81C/CP (5 Groups Maximum)

**Table 17**  
**IGS cabling chart (Part 1 of 2)**

Net Group	Net Shelf	IGS Connector	IGS Net	Slot	Net	DIGS	Slot Connector	Intergroup connector	I G S	Clock
0	0	0	3	8	2	9	BOTTOM	J1	0	
0	0	1	2	9	2	9	TOP	J6	2	0
0	1	1	2	9	2	9	TOP	J17	3	1
0	1	0	3	8	2	9	BOTTOM	J22	1	
1	0	0	3	8	2	9	BOTTOM	J2	4	

**Table 17**  
**IGS cabling chart (Part 2 of 2)**

1	0	1	2	9	2	9	TOP	J7	6	0
1	1	1	2	9	2	9	TOP	J16	7	1
1	1	0	3	8	2	9	BOTTOM	J21	5	
2	0	0	3	8	2	9	BOTTOM	J3	8	
2	0	1	2	9	2	9	TOP	J8	1 0	0
2	1	1	2	9	2	9	TOP	J15	1 1	1
2	1	0	3	8	2	9	BOTTOM	J20	9	
3	0	0	3	8	2	9	BOTTOM	J4	1 2	
3	0	1	2	9	2	9	TOP	J9	1 4	0
3	1	1	2	9	2	9	TOP	J14	1 5	1
3	1	0	3	8	2	9	BOTTOM	J19	1 3	
4	0	0	3	8	2	9	BOTTOM	J5	1 6	
4	0	1	2	9	2	9	TOP	J10	1 8	0
4	1	1	2	9	2	9	TOP	J14	1 9	1
4	1	0	3	8	2	9	BOTTOM	J18	1 7	

**Note:** A DIGS Card is located in the card slot position for IGS 1 in all network shelves. The IGS 1 slot detects the clock signals from the active clock controller and distributes the clock to the entire group. Three out of four IGS cards can be disabled at any given time via LD 39, the IGS 1 that is associated with the active clock cannot be disabled via software, e.g. if clock 1 is active then IGS's 3,7,11,15 and 19 can never be disabled as they are providing clock for their respective network groups.

### Group/Loop/PS/FIJI/3PE Switch Settings

**Table 18**  
**Switch settings (Part 1 of 2)**

Group	Shelf	P S	Loops	FIJI*	3PE NT8D35 Net**	3PE NT5D21 Core Net**
0	0	0	0-16	0 0	off on on on on on on on	off on on off on on on on
0	1	1	16-31	0 1	off on on on on on on off	off on on off on on on off
1	0	2	32-47	1 0	off on on on on on off on	off on on off on on off on
1	1	3	48-63	1 1	off on on on on on off off	off on on off on on off off
2	0	4	64-79	2 0	off on on on on off on on	off on on off on off on on
2	1	5	80-95	2 1	off on on on on off on off	off on on off on off on off
3	0	6	96-111	3 0	off on on on on off off on	off on on off on off off on
3	1	7	112-127	3 1	off on on on on off off off	off on on off on off off off
4	0	8	128-143	4 0	off on on on off on on on	off on on off off on on on
4	1	9	144-159	4 1	off on on on off on on off	off on on off off on on off
5	0	10	160-175	5 0	off on on on off on off on	off on on off off on off on

**Table 18**  
**Switch settings (Part 2 of 2)**

5	1	1 1	176-19 1	5 1	off on on on off on off off	off on on off off on off off
6	0	1 2	192-20 7	6 0	off on on on off off on on	off on on off off off on on
6	1	1 3	208-23 3	6 1	off on on on off off on off	off on on off off off on off
7	0	1 4	224-23 9	7 0	off on on on off off off on	off on on off off off off on
7	1	1 5	240-25 5	7 1	off on on on off off off off	off on on off off off off off





---

# Index

---

## B

backup the database, 30

BKO, 30

## C

call processing, effect of software upgrades on, 17

conversion media

defined, 17

## D

data dump, 30

## F

Fiber Network

verification and status, 108, 112

## L

LD 37 program

3PE Card replacement, 53

## P

printouts

site data, 27

## S

single CPU systems

call processing disruptions on, 17

site data printouts

pre-conversion procedure, 27

source software

defined, 18

## T

target software, 18

terminal

connection and settings, 26

## U

Unattended backup (BKO command), 30

